

Document # ACD-PROC-000062	Date Effective 09-23-2003			
Prepared by: D. A. Sheppard and J. L. Odom	Supersedes None			
Subsystem ACD Flee	ctronics			

# **GLAST ACD TECHNICAL DOCUMENT**

Document Title

**GLAST LAT ACD GARC Test Procedure** 

# Gamma-ray Large Area Space Telescope (GLAST) Large Area Telescope (LAT) Anti-Coincidence Detector (ACD)

**GARC ASIC (GLAST ACD Readout Controller)** 

**GARC Test Procedure** 

**ACD-PROC-000062** 

**Rev (-) September 23, 2003** 

# **Document Approval**

Prepared by:	Prepared by:
James Odom Date ACD Electronics	Dave Sheppard Date ACD Electronics
Approved by:	Approved by:
Glenn Unger Date ACD Electronics System Lead	George Shiblie Date ACD Systems Engineer
Approved by:	Approved by:
Tom Johnson Date ACD Project Manager	Dave Thompson Date ACD Subsystems Manager
Approved by:	Approved by:
Date Ouality Assurance	Bob Hartman Date ACD Scientist

# **GARC Test Table of Contents**

1.0	Description of the GARC ASIC	
2.0	Preconditions to and Preparations for Starting this Test	6
2.1	GARC Chip Identification	6
2.2	Test Equipment Utilized	
3.0	GARC Command Mnemonics and Functions	
4.0	Testing the GARC Digital Logic	
4.1	Measurement of the GARC Bias Resistor Voltages	
4.2	Initial Reset Test	
5.0	GARC Power Measurements	
5.1	Measurement at the Nominal Power Supply Voltage	
5.2	Measurement at the Minimum Power Supply Voltage	
5.3	Measurement at the Maximum Power Supply Voltage	
6.0	GARC Register Read/Write and PHA ReadoutTests	
6.1	Veto_Delay Register Test	
6.2	HVBS Level Register Test	
6.3	SAA Level Register Test	
6.4	Hold Delay Register Test	
6.5	Veto Width Register Test	
6.6	HitMap Width Register Test	
6.7	HitMap Deadtime Register Test	
6.8	HitMap Delay Register Test	
6.9	PHA En0 Register Test	
6.10	E	
6.11 6.12	E	
6.13	· · · · · · · · · · · · · · · · · · ·	
6.14	· · · · · · · · · · · · · · · · · · ·	
6.15		
6.16		
6.17	· · · · · · · · · · · · · · · · · · ·	
6.18	<u> </u>	
6.19	<u> </u>	
6.20	<u> </u>	
6.21	<u> </u>	
6.22	<u> </u>	
6.23		
6.24	$oldsymbol{\mathcal{E}}$	
6.25		
6.26		
6.27	<u> </u>	
6.28		
6.29		
6.30	<u> </u>	
6.31	· · · · · · · · · · · · · · · · · · ·	
6.32		
6.33	· · · · · · · · · · · · · · · · · · ·	
6.34		
6.35	GAFE ASIC VETO DAC Register Test	28
6.36	GAFE ASIC VETO VERNIER Register Test	28

6.37 GAFE ASIC HLD Register Test	28
6.38 GAFE ASIC BIAS Register Test	
6.39 GAFE ASIC TCI Register Test	29
6.40 Test of the GAFE Parity Command Circuitry	30
6.41 Test of the GARC Parity Error Detection and Error Generation	30
6.42 Test of the GARC Diagnostic Status Register	31
6.43 Command Counter Test	31
6.44 Test of the Look-At-Me Circuitry	31
7.0 Test of the GARC PHA Functions	33
7.1 Maximum PHA Return Test	33
7.2 PHA Enable/Disable Test	34
7.3 PHA Threshold Verification Test	
8.0 Test of the MAX5121 DAC and Associated High Voltage Supply Control Functions	
8.1 Capture of the DAC Control Signals	
8.2 Test of the GARC SAA/HV Normal Modes	37
8.3 Test of the HVBS Triple Modular Redundancy Circuitry	38
9.0 GARC Test Pin Mux Verification	40
10.0 Test of the Hold Delay Operation.	40
11.0 Test of the AEM VETO Signal Functionality	44
11.1 Veto Delay Test	44
11.2 Veto Width Test	46
11.3 Veto Enable and Disable Test	46
11.4 Discriminator Input Minimum Width Test	48
11.5 Discriminator Input Extended Width Test	50
11.6 Discriminator Input Double Pulse Test	51
12.0 Test of the HitMap Functionality	52
12.1 HitMap Width Test	52
12.2 HitMap Delay Test	53
12.3 HitMap Deadtime Stretch Test	54
12.4 HitMap Minimum Width Test	55
12.5 HitMap Extended Pulse Test	
12.6 HitMap Double Pulse Test	
13.0 Strobe Test	56
14.0 Capture of the ADC Control Signals	
15.0 ADC TACQ Test	
16.0 Test of the GARC LVDS Circuitry Driver Currents	
17.0 Multiple System Clock Speed Test and Power Supply Rail Tests – 3.0V to 3.6V	
Appendix 1: GARC Documentation	
Appendix 2: GARC Configuration Command Format	
Appendix 3: GARC Event Data Format:	
Appendix 4: GARC Configuration Data Readback Format:	
Appendix 5: GARC Pin List	
Appendix 6: Test Results Record	70

# **Document Change Log**

Revision	Date	Change Description	Prepared by
Initial Draft	May, 2003	Initial Draft	Dave Sheppard
Updated	September 23, 2003	Updates from first GARC testing	Jim Odom and Dave Sheppard

### 1.0 Description of the GARC ASIC

GARC is the acronym for the Gamma-Ray Large Area Space Telescope (GLAST) Anti-Coincidence Detector (ACD) Readout Controller Application Specific Integrated Circuit (ASIC). The GARC is the main logical interface for the ACD to the LAT instrument electronics. GARC provides command and data return functions for electronics boards associated with the ACD. There are 12 GARCs in the flight system, one for each of the event electronics cards. The GARC is a +3.3V single supply device and communicates to the LAT digitally via LVDS interfaces. The GARC is packaged in a 208 pin plastic quad flatpack.

This document describes the functions and test plan of the GARC ASIC. The GARC is designed to meet the requirements of the ACD Level IV Electronics Requirements, LAT-SS-00352, and the ACD-LAT Interface Control Document, LAT-SS-00-363.

The design was done utilizing Verilog as the description language, Exemplar Leonardo Spectrum as the synthesis tool targeting the Tanner Agilent 0.5 µm standard cell library, and Tanner L-Edit as the automated place and route layout tool. Core verification was performed via the Tanner LVS tool.

# 2.0 Preconditions to and Preparations for Starting this Test

This is the nominal functional test used to verify that the GARC meets the specified requirements. Prior to starting this test, the power supply to the GARC test board should be verified to be at the correct voltage, which is nominally +3.3V. Variations of this test may include voltages in the +3.0V to +3.6V range, temperatures in the range of -20C to +60C, and different clock frequencies. Nominally, the ACD clock frequency is to be 20 MHz.

Notify QA 24 hours prior to the start of this test. QA will verify test equipment set up and calibration, review documentation and decide if their presence is required during the testing. Indicate on the test record whether QA was present for the testing.

Additionally, prior to starting the functional test, the proper biasing of the GARC circuitry is to be verified. The following table details the expected biases.

GARC	GARC	Nominal Bias	GARC Test	Function of
Bias Signal	Pin	<b>Resistor Required</b>	<b>Board Res</b>	Bias Resistor
HLD_WOR_BIAS	104	$7.50 \text{ k}\Omega$ to DGND	R19	HLD Wired-OR Rcvr Bias
BIAS_RCVR	156	82.5 k $\Omega$ to VDD	R16	LVDS Rcvr Bias Adjust
BIAS_DRV_H	160	$4.53 \text{ k}\Omega$ to DGND	R15	LVDS Driver Bias Adjust
BIAS_DRV_L	169	15.0 kΩ to DGND	R13	LLDRV Driver Bias Adjust
LVDS_PRESETADJ	184	$3.92 \text{ k}\Omega$ to VDD	R20	LVDS Preset Adjust

An additional variation possible to this test is to individually vary the bias resistors by some nominal amount (e.g., 10%) and utilize this functional test to determine variations in performance, if any.

All measurements and test results will be recorded in the "Test Results Record" Appendix 6. A copy of the entire this entire document is not required each time the test is performed. The appendix will serve as the official record each time this test is performed.

2.1		Identifi	

701 4 4 1 4	C 41 .			
The test conductor	or tor this	tect ic.		
The test conducte	1101 11113	tost is.		

The identification/Serial Number listed on the GARC AS	SIC is:
The serial number of the AEM Simulator board is:	
The serial number of the GARC Test board is:	
The serial number of the GAFE Simulator board is:	

# 2.2 <u>Test Equipment Utilized</u>

Prior to starting this test, the Test Conductor shall record the test and measurement hardware used in the performance of this test. Note that all multimeters used in testing of the FREE circuit card assembly shall be of low current output design, such as the Fluke 70 series, HP3400 series or similar. High current output multimeters are not compatible with the FREE circuitry.

Instrument Type	Manufacturer & Model Number	NASA ID Number	<b>Calibration Due Date</b>
Power Supply +3.3V			
Multimeter 1			
Multimeter 2			
Pulse Generator			
Oscilloscope			
AEM GSE Board Serial Number			
GAFE Simulator Board Serial Number			

# 3.0 GARC Command Mnemonics and Functions

The following table represents each of the available GARC commands. Additionally, all GAFE commands are passed through the GARC. These command patterns are detailed in the document discussing the GAFE logic. There are two types of GARC commands – trigger commands (4 bits in length) and configuration commands (34 bits in length). The AEM-ACD ICD contains the authoritive formats for all command types, but they are repeated in the appendices of this document for convenience. The table below defines the command mnemonics that will be used in this test.

Note that a GAFE will process a write command either for the address hard-wired to the chip address pins or to an address of 'h1F, the GAFE broadcast address. A GAFE will process a read command only for an address identical to the hard-wired address. It is an operational constraint that, for any given ACD circuit board, each GAFE must have a unique address.


GARC Cmd No.	ACD Command Mnemonic	Rd/Wr Status	Select GARC=0 GAFE=1	Function Block	Register Number	No. of Data Bits	Command Function
1	Trigger_ZS	N/A	N/A	N/A	N/A	N/A	ACD Trigger, Zero-Suppression Enable
2	Trigger_NOZS	N/A	N/A	N/A	N/A	N/A	ACD Trigger, No Zero-Suppression
3	GARC_Reset	W	0	0	1	0	Generates reset for GARC and GAFE registers
4	Veto Delay Wr	W	0	0	2	5	Sets Delay from Disc In to VETO Out
5	Veto Delay Rd	R	0	0	2	5	Reads contents of Veto Delay register
6	GARC_Cal_Strobe	W	0	0	3	0	Sends Calibration Strobe signal to all GAFEs
7	HVBS_Level_Wr	W	0	0	8	12	Sets GARC register value from which HVBS may be commanded in the science mode
8	HVBS_Level_Rd	R	0	0	8	12	Reads contents of HVBS Level register
9	SAA_Level_Wr	W	0	0	9	12	Sets GARC register value from which HVBS may be commanded when in the SAA
10	SAA_Level_Rd	R	0	0	9	12	Reads contents of SAA Level register
11	Use_HV_Normal	W	0	0	10	0	Sends 12 bit value in HVBS Level register to the MAX5121 DAC
12	DAC_HVReg_Rd	R	0	0	10	0	Reads MAX5121 DAC Config Register
13	Use_SAA_Normal	W	0	0	11	0	Sends 12 bit value in SAA Level register to the MAX5121 DAC
14	DAC_SAAReg_Rd	R	0	0	11	0	Reads MAX5121 DAC Config Register
15	Hold_Delay_Wr	W	0	0	12	7	Sets GARC Hold Delay
16	Hold_Delay_Rd	R	0	0	12	7	Reads back value of GARC Hold Delay register
17	Veto Width Wr	W	0	0	13	3	Sets width of the VETO signals
18	Veto_Width_Rd	R	0	0	13	3	Reads back width of the VETO width register
19	HitMap_Width_Wr	W	0	0	14	4	Sets width of HitMap pulses
20	HitMap_Width_Rd	R	0	0	14	4	Reads back value in the HitMap width register
21	HitMap_Deadtime_Wr	W	0	0	15	3	Sets stretch at end of HitMap pulses
22	HitMap_Deadtime_Rd	R	0	0	15	3	Sets stretch at end of HitMap pulses
23	Look_At_Me	W	0	1	4	16	GARC interface selection command (primary/secondary)
24	HitMap_Delay_Wr	W	0	1	8	5	Sets delay from Disc_In to HitMap pulse
25	HitMap_Delay_Rd	R	0	1	8	5	Reads back contents of the HitMap Delay register
26	PHA_EN0_Wr	W	0	1	9	16	Enables and Disables PHA readout enable, channels 0 -15

27	PHA_EN0_Rd	R	0	1	9	16	Reads back contents of the PHA_EN0 register
28	VETO_EN0_Wr	W	0	1	10	16	Enables and Disables VETO signals,
29	VETO_EN0_Rd	R	0	1	10	16	channels 0 -15  Reads back contents of the VETO_EN0
30	PHA_EN1_Wr	W	0	1	12	2	register Enables and Disables PHA readout
31	PHA_EN1_Rd	R	0	1	12	2	enable, channels 16 & 17  Reads back contents of the PHA_EN1
32	VETO_EN1_Wr	W	0	1	13	2	register Enables and Disables VETO signals,
33	VETO EN1 Rd	R	0	1	13	2	channels 16 & 17  Reads back contents of the VETP_EN1
34	Max_PHA_Wr	W	0	1	15	5	register Sets the Maximum number (limit) of
34	Max_FHA_WI	vv	U	1	13	3	PHA to be returned in a single event data packet
35	Max_PHA_Rd	R	0	1	15	5	Reads back the contents of the Max_PHA register
36	GARC Mode Wr	W	0	2	8	11	Sets values of GARC mode bits
37	GARC_Mode_Rd	R	0	2	8	11	Reads back the value of the GARC mode register
38	GARC_Status	R	0	2	9	6	Reads back the value of the GARC
							status register
39	GARC_Cmd_Reg	R	0	2	10	16	Reads back the value of the GARC command register
40	GARC_Diagnostic	R	0	2	11	16	Reads back the value of the GARC diagnostic register
41	GARC_Cmd_Rejects	R	0	2	12	8	Reads back the number of rejected commands since reset
42	FREE_Board_ID	R	0	2	13	8	Reads back the FREE board serial number
43	GARC_Version	R	0	2	14	3	Reads back the GARC ASIC version number
44	PHA Thresh00 Wr	W	0	3	8	12	Writes PHA ZS threshold for channel 00
45	PHA_Thresh00_Rd	R	0	3	8	12	Reads back PHA ZS threshold register for channel 00
46	PHA Thresh01 Wr	W	0	3	9	12	Writes PHA ZS threshold for channel 01
47	PHA_Thresh01_Rd	R	0	3	9	12	Reads back PHA ZS threshold register for channel 01
48	PHA Thresh02 Wr	W	0	3	10	12	Writes PHA ZS threshold for channel 02
49	PHA_Thresh02_Rd	R	0	3	10	12	Reads back PHA ZS threshold register for channel 02
50	PHA Thresh03 Wr	W	0	3	11	12	Writes PHA ZS threshold for channel 03
51	PHA_Thresh03_Rd	R	0	3	11	12	Reads back PHA ZS threshold register for channel 03
52	PHA Thresh04 Wr	W	0	2	12	12	Writes PHA ZS threshold for channel 04
53	PHA_Thresh04_Rd	R	0	3	12	12	Reads back PHA ZS threshold register
		*	•			~~	for channel 04
54	PHA_Thresh05_Wr	W	0	3	13	12	Writes PHA ZS threshold for channel 05
55	PHA_Thresh05_Rd	R	0	3	13	12	Reads back PHA ZS threshold register for channel 05
56	PHA_Thresh06_Wr	W	0	3	14	12	Writes PHA ZS threshold for channel 06
57	PHA_Thresh06_Rd	R	0	3	14	12	Reads back PHA ZS threshold register
58	PHA Thresh07 Wr	W	0	4	8	12	for channel 06 Writes PHA ZS threshold for channel 07
59	PHA_Thresh07_Rd	R	0	4	8	12	Reads back PHA ZS threshold register
60	PHA Thresh08 Wr	W	0	4	9	12	for channel 07 Writes PHA ZS threshold for channel 08
61	PHA_Thresh08_Rd	R	0	4	9	12	Reads back PHA ZS threshold register
62	PHA Thresh09 Wr	W	0	1	10	12	for channel 08 Writes PHA ZS threshold for channel 09
63	PHA_Thresh09_W1 PHA Thresh09 Rd	R	0	4	10	12	Reads back PHA ZS threshold register
0.5	111/1_1111C311U7_IXU	1\	v		10	12	Treads ouch 1 1171 ZB unreshold legistel

							for channel 09
64	PHA Thresh10 Wr	W	0	4	11	12	Writes PHA ZS threshold for channel 10
65	PHA Thresh10 Rd	R	0	4	11	12	Reads back PHA ZS threshold register
0.5	TITT_TITTESHTO_RC	10			11	12	for channel 10
66	PHA Thresh11 Wr	W	0	4	12	12	Writes PHA ZS threshold for channel 11
67	PHA Thresh11 Rd	R	0	4	12	12	Reads back PHA ZS threshold register
							for channel 11
68	PHA_Thresh12_Wr	W	0	4	13	12	Writes PHA ZS threshold for channel 12
69	PHA_Thresh12_Rd	R	0	4	13	12	Reads back PHA ZS threshold register
							for channel 12
70	PHA_Thresh13_Wr	W	0	4	14	12	Writes PHA ZS threshold for channel 13
71	PHA_Thresh13_Rd	R	0	4	14	12	Reads back PHA ZS threshold register
72	DIIA Thurshid W	***	0	-	0	12	for channel 13
72	PHA_Thresh14_Wr	W R	0	5	8	12 12	Writes PHA ZS threshold for channel 14
/3	PHA_Thresh14_Rd	K	0	3	8	12	Reads back PHA ZS threshold register for channel 14
74	PHA Thresh15 Wr	W	0	5	9	12	Writes PHA ZS threshold for channel 15
75	PHA_Thresh15_Rd	R	0	5	9	12	Reads back PHA ZS threshold register
7.5	TIM_TIMESHIS_Rd	IX	Ů			12	for channel 15
76	PHA Thresh16 Wr	W	0	5	10	12	Writes PHA ZS threshold for channel 16
77	PHA_Thresh16_Rd	R	0	5	10	12	Reads back PHA ZS threshold register
							for channel 16
78	PHA Thresh17 Wr	W	0	5 5	11	12	Writes PHA ZS threshold for channel 17
79	PHA_Thresh17_Rd	R	0	5	11	12	Reads back PHA ZS threshold register
							for channel 17
80	ADC_TACQ_Wr	W	0	5	12	6	Sets ADC Acquisition Time from Hold
							to Start of Conversion
81	ADC_TACQ_Rd	R	0	5	12	6	Reads back contents of the ADC_TACQ
02	CAPE M. 1. W.	***		CAPE	0	1.6	register
82	GAFE_Mode_Wr	W	1	GAFE	0	16	Writes the GAFE mode register for the
83	CAEE Mode Dd	R	1	Addr GAFE	0	16	ASIC addressed  Reads the GAFE mode register contents
83	GAFE_Mode_Rd	K	1	Addr	U	10	for the ASIC addressed
84	GAFE_VETO_Wr	W	1	GAFE	1	6	Writes the DAC1 register in the GAFE
04	GME_VETO_WI	**	1	Addr	1		addressed
85	GAFE_VETO_Rd	R	1	GAFE	1	6	Reads back the contents of the DAC1
				Addr			register in the addressed GAFE
86	GAFE_VERNIER_Wr	W	1	GAFE	2	6	Writes the DAC2 register in the GAFE
				Addr			addressed
87	GAFE_VERNIER_Rd	R	1	GAFE	2	6	Reads back the contents of the DAC2
				Addr			register in the addressed GAFE
88	GAFE_HLD_Wr	W	1	GAFE	3	6	Writes the DAC3 register in the GAFE
00	CAFE III D. D.1	D	1	Addr	2		addressed
89	GAFE_HLD_Rd	R	1	GAFE Addr	3	6	Reads back the contents of the DAC3 register in the addressed GAFE
90	GAFE_BIAS_Wr	W	1	GAFE	4	6	Writes the DAC4 register in the GAFE
70	GAPE_DIAS_WI	VV	1	Addr		0	addressed
91	GAFE_BIAS_Rd	R	1	GAFE	4	6	Reads back the contents of the DAC4
	0.11 2_21.15_1.4		•	Addr	·		register in the addressed GAFE
92	GAFE TCI Wr	W	1	GAFE	5	6	Writes the DAC5 register in the GAFE
				Addr			addressed
93	GAFE_TCI_Rd	R	1	GAFE	5	6	Reads back the contents of the DAC5
				Addr			register in the addressed GAFE
94	GAFE_Version	R	1	GAFE	6	3	Reads back the GAFE ASIC version
0.7	CAPE W. S.	ъ	1	Addr		0	D 11 14
95	GAFE_Write_Ctr	R	1	GAFE	7	8	Reads back the contents of the GAFE
06	CAEE Dainet Co	D	1	Addr	0	0	write counter register
96	GAFE_Reject_Ctr	R	1	GAFE Addr	8	8	Reads back the contents of the GAFE command reject register
97	GAFE Cmd Ctr	R	1	GAFE	9	8	Reads back the contents of the GAFE
"	JAN L_CING_CU	1	1	Addr	'	0	command counter
98	GAFE Chip Addr	R	1	GAFE	10	5	Reads back the hardwired address of a
				Addr			GAFE ASIC
_							

### 4.0 Testing the GARC Digital Logic

The GARC logic is based on a command-response protocol and requires an AEM or AEM simulator to access the logic functions. For each of the following commands, the proper GARC and/or GAFE response may be tested. Note that all GAFEs will respond to a broadcast write command (e.g., GAFE address of decimal 31), but a read command requires a unique GAFE address. The following test details the proper sequence for a single GARC ASIC. The steps are numbered for easier reference. The test setup required is detailed in the diagram below.

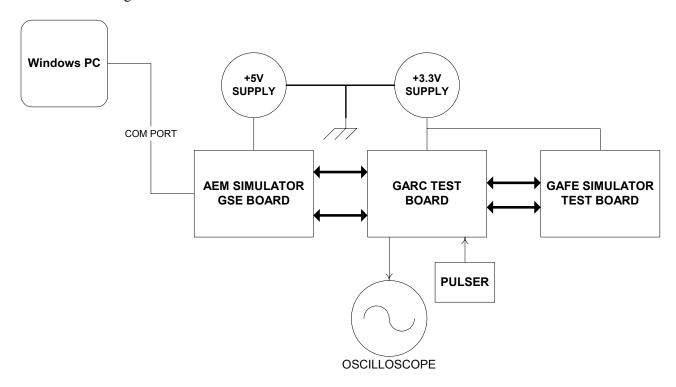

# GARC ASIC FUNCTIONAL TEST SETUP

#### 4.1 Measurement of the GARC Bias Resistor Voltages

Verify that the GARC power supply is set to +3.3V. Using the GLAST GARC Test Board measure the following bias voltages on the resistors indicated.

At turn-on, measure the +3.3V current: \_\_\_\_\_ mA

GARC Bias Signal	GARC Pin	<b>Resistor Test Point</b>	<b>Expected Voltage</b>	Measured Voltage
HLD_WOR_BIAS	104	R19	1.64	
BIAS_RCVR	156	R16	1.10	
BIAS_DRV_H	160	R15	1.53	
BIAS_DRV_L	169	R13	1.75	

LVDS_PRESET_ADJ 184 R20	1.52
-------------------------	------

# 4.2 <u>Initial Reset Test</u>

This section will verify that GARC registers have been properly initialized during a reset command. The following test sequence of commands will perform this verification. This test will also verify that the GARC to AEM command link is functional.

- 1. Verify the external GARC Power On Reset pulse. Use the LabView GSE and send the Read All Values command.
- 2. Send the Veto Delay Rd command. The data field in the return data stream should be 5.
- 3. Send the HVBS\_Level\_Rd command. The data field in the return data stream should be 0.
- 4. Send the SAA Level Rd command. The data field in the return data stream should be 0.
- 5. Send the Hold\_Delay\_Rd command. The data field in the return data stream should be 28.
- 6. Send the Veto Width Rd command. The data field in the return data stream should be 2.
- 7. Send the HitMap Width Rd command. The data field in the return data stream should be 7.
- 8. Send the HitMap Deadtime Rd command. The data field in the return data stream should be 3.
- 9. Send the HitMap Delay Rd command. The data field in the return data stream should be 16.
- 10. Send the PHA En0 Rd command. The data field in the return data stream should be 65535.
- 11. Send the PHA En1 Rd command. The data field in the return data stream should be 3.
- 12. Send the Veto En0 Rd command. The data field in the return data stream should be 65535.
- 13. Send the Veto En1 Rd command. The data field in the return data stream should be 3.
- 14. Send the Max PHA Rd command. The data field in the return data stream should be 4.
- 15. Send the GARC Mode Rd command. The data field in the return data stream should be 768.
- 16. Send the GARC Status command. The data field in the return data stream should be 24.
- 17. Send the GARC Cmd Reg command. The data field in the return data stream should be 0.
- 18. Send the GARC Cmd Rejects command. The data field in the return data stream should be 0.
- 19. Send the GARC\_Version command. The data field in the return data stream should be 2 for GARC V2.
- 20. Send the PHA Thresh00 Rd command. The data field in the return data stream should be 1114.
- 21. Send the PHA Thresh01 Rd command. The data field in the return data stream should be 1114.
- 22. Send the PHA\_Thresh02\_Rd command. The data field in the return data stream should be 1114.
- 23. Send the PHA\_Thresh03\_Rd command. The data field in the return data stream should be 1114.
- 24. Send the PHA Thresh04 Rd command. The data field in the return data stream should be 1114.
- 25. Send the PHA Thresh05 Rd command. The data field in the return data stream should be 1114.
- 26. Send the PHA Thresh06 Rd command. The data field in the return data stream should be 1114.
- 27. Send the PHA Thresh07 Rd command. The data field in the return data stream should be 1114.

- 28. Send the PHA Thresh08 Rd command. The data field in the return data stream should be 1114.
- 29. Send the PHA Thresh09 Rd command. The data field in the return data stream should be 1114.
- 30. Send the PHA Thresh10 Rd command. The data field in the return data stream should be 1114.
- 31. Send the PHA\_Thresh11\_Rd command. The data field in the return data stream should be 1114.
- 32. Send the PHA\_Thresh12\_Rd command. The data field in the return data stream should be 1114.
- 33. Send the PHA Thresh13 Rd command. The data field in the return data stream should be 1114.
- 34. Send the PHA Thresh14 Rd command. The data field in the return data stream should be 1114.
- 35. Send the PHA Thresh15 Rd command. The data field in the return data stream should be 1114.
- 36. Send the PHA Thresh16 Rd command. The data field in the return data stream should be 1114.
- 37. Send the PHA Thresh17 Rd command. The data field in the return data stream should be 1114.
- 38. Send the ADC TACO Rd command. The data field in the return data stream should be 0.
- 39. Send the Trigger\_ZS command (this captures the FREE board ID). Verify the FREE board ID is 165 indicating the GARC Test board.
- 40. Send the GARC\_Reset command (Do Reset button). Verify that the FREE ID = 0.

41.

42. Verify the status of the GARC registers as shown in steps 2 - 38 above.

If all steps above have verified correctly, the GARC reset function has been verified. A summary of the initial reset parameters for GARC and GAFE is detailed below.

Register	Initial Value	Initial Value
_	(decimal)	(hex)
Veto_Delay	5	5
HVBS_Level	0	0
SAA_Level	0	0
Hold_Delay	28	1C
Veto_Width	2	2
HitMap_Width	7	7
HitMap_Deadtime	3	3
HitMap_Delay	16	10
PHA_EN0	65535	FFFF
PHA_EN1	3	3
VETO_EN0	65535	FFFF
VETO_EN1	3	3
Max_PHA	4	4
GARC_Mode	768	300
GARC_Status	24	18
Command_Register	0	0
GARC_Diagnostic	0	0
Cmd_Reject_Ctr	0	0
FREE_Board_ID	*	*
GARC_Version	1	1
PHA_Threshold_00	1114	45A
PHA_Threshold_01	1114	45A
PHA_Threshold_02	1114	45A
PHA_Threshold_03	1114	45A
PHA_Threshold_04	1114	45A

1114	45A
1114	45A
0	0
48	30
57	39
38	26
55	37
32	20
0	0
0	0
0	0
	1114 1114 1114 1114 1114 1114 1114 1114 1114 1114 1114 1114 0 48 57 38 55 32 0

# 5.0 GARC Power Measurements

# 5.1 Measurement at the Nominal Power Supply Voltage

Verify that the GARC power supply is set to +3.30V. After initial power up, measure the +3.30V power supply current to the GARC in the following modes. Record these values in the table below.

- 1. Send the GARC\_Mode\_Wr command with a data argument of 768. Send the GARC\_Mode\_Rd command to verify. Both the primary and secondary LVDS VETO drivers should be enabled. Record the GARC current in the table below.
- 2. Send the GARC\_Mode\_Wr command with a data argument of 256. Send the GARC\_Mode\_Rd command to verify. Only the primary LVDS VETO drivers should now be enabled. Record the GARC current in the table below.
- 3. Send the GARC\_Mode\_Wr command with a data argument of 512. Send the GARC\_Mode\_Rd command to verify. Only the secondary LVDS VETO drivers should now be enabled. Record the GARC current in the table below.
- 4. Send the GARC\_Mode\_Wr command with a data argument of 0. Send the GARC\_Mode\_Rd command to verify. None of the LVDS VETO drivers should now be enabled. Record the GARC current in the table below.

GARC Mode	GARC_Mode_Wr	+3.3V Current	+3.3V Current
	Data Argument	Measured (mA)	Expected (mA)
LVDS "A" Drivers Enabled			250
LVDS "B" Drivers Enabled	768		
LVDS "A" Drivers Enabled			200
LVDS "B" Drivers Disabled	256		
LVDS "A" Drivers Disabled			200
LVDS "B" Drivers Enabled	512		
LVDS "A" Drivers Disabled			145
LVDS "B" Drivers Disabled	0		

## 5.2 Measurement at the Minimum Power Supply Voltage

Verify that the GARC power supply is set to +3.0V. After initial power up, measure the +3.0V power supply current to the GARC in the following modes. Record these values in the table below.

- 1. Send the GARC\_Mode\_Wr command with a data argument of 768. Send the GARC\_Mode\_Rd command to verify. Both the primary and secondary LVDS VETO drivers should be enabled. Record the GARC current in the table below.
- 2. Send the GARC\_Mode\_Wr command with a data argument of 256. Send the GARC\_Mode\_Rd command to verify. Only the primary LVDS VETO drivers should now be enabled. Record the GARC current in the table below.
- 3. Send the GARC\_Mode\_Wr command with a data argument of 512. Send the GARC\_Mode\_Rd command to verify. Only the secondary LVDS VETO drivers should now be enabled. Record the GARC current in the table below.
- 4. Send the GARC\_Mode\_Wr command with a data argument of 0. Send the GARC\_Mode\_Rd command to verify. None of the LVDS VETO drivers should now be enabled. Record the GARC current in the table below.

GARC Mode	GARC_Mode_Wr	+3.0V Current	+3.0V Current
	Data Argument	Measured (mA)	Expected (mA)
LVDS "A" Drivers Enabled			225
LVDS "B" Drivers Enabled	768		
LVDS "A" Drivers Enabled			180
LVDS "B" Drivers Disabled	256		
LVDS "A" Drivers Disabled			180
LVDS "B" Drivers Enabled	512		
LVDS "A" Drivers Disabled			130
LVDS "B" Drivers Disabled	0		

# 5.3 Measurement at the Maximum Power Supply Voltage

Verify that the GARC power supply is set to +3.6V. After initial power up, measure the +3.6V power supply current to the GARC in the following modes. Record these values in the table below.

- 1. Send the GARC\_Mode\_Wr command with a data argument of 768. Send the GARC\_Mode\_Rd command to verify. Both the primary and secondary LVDS VETO drivers should be enabled. Record the GARC current in the table below.
- 2. Send the GARC\_Mode\_Wr command with a data argument of 256. Send the GARC\_Mode\_Rd command to verify. Only the primary LVDS VETO drivers should now be enabled. Record the GARC current in the table below.
- 3. Send the GARC\_Mode\_Wr command with a data argument of 512. Send the GARC\_Mode\_Rd command to verify. Only the secondary LVDS VETO drivers should now be enabled. Record the GARC current in the table below.
- 4. Send the GARC\_Mode\_Wr command with a data argument of 0. Send the GARC\_Mode\_Rd command to verify. None of the LVDS VETO drivers should now be enabled. Record the GARC current in the table below.

GARC Mode	GARC_Mode_Wr Data Argument	+3.6V Current Measured (mA)	+3.6V Current Expected (mA)
LVDS "A" Drivers Enabled			290
LVDS "B" Drivers Enabled	768		
LVDS "A" Drivers Enabled			225
LVDS "B" Drivers Disabled	256		
LVDS "A" Drivers Disabled			225
LVDS "B" Drivers Enabled	512		
LVDS "A" Drivers Disabled			160
LVDS "B" Drivers Disabled	0		

- 5. Reset the GARC power supply to +3.3V.
- 6. Send the GARC Reset command to return the GARC to the initial power-on configuration.

# 6.0 GARC Register Read/Write and PHA ReadoutTests

This section tests the proper functioning of each bit of the commandable registers in the GARC. The intent is to toggle each bit in a variety of patterns to ensure that all bits are addressable and that there is no stuck-at-fault condition. This can be accomplished using the LabView GSE software by doing the Register Test 5 times with all GAFE registers enabled. If done via the automated procedure, the next section will be 6.40. The following GARC registers will be tested in this section:

GARC Register Name	Register Width (bits)	Register Type
Veto_Delay	5	Read/Write
HVBS_Level	12	Read/Write
SAA_Level	12	Read/Write
Hold_Delay	7	Read/Write
Veto Width	3	Read/Write
HitMap Width	4	Read/Write
HitMap_Deadtime	3	Read/Write
HitMap Delay	5	Read/Write
PHA_En0	16	Read/Write
PHA En1	2	Read/Write
VETO En0	16	Read/Write
VETO En1	2	Read/Write
Max PHA	5	Read/Write
GARC Mode	11	Read/Write
GARC Status	6	Read Only
Command Register	16	Read Only
GARC_Diagnostic	16	Read Only
Cmd_Reject_Counter	8	Read Only
FREE Board ID	8	Read Only
GARC_Version	3	Read Only
PHA Threshold 00	16	Read/Write
PHA_Threshold_01	16	Read/Write
PHA_Threshold_02	16	Read/Write
PHA_Threshold_03	16	Read/Write
PHA_Threshold_04	16	Read/Write
PHA_Threshold_05	16	Read/Write
PHA_Threshold_06	16	Read/Write
PHA_Threshold_07	16	Read/Write
PHA_Threshold_08	16	Read/Write
PHA_Threshold_09	16	Read/Write
PHA Threshold 10	16	Read/Write
PHA Threshold 11	16	Read/Write
PHA Threshold 12	16	Read/Write
PHA_Threshold_13	16	Read/Write
PHA_Threshold_14	16	Read/Write
PHA Threshold 15	16	Read/Write
PHA_Threshold_16	16	Read/Write
PHA_Threshold_17	16	Read/Write
ADC TACQ	6	Read/Write

# 6.1 <u>Veto Delay Register Test</u>

- 1. Send the Veto\_Delay\_Wr command with a data argument of 5'h0 (0). Send the Veto\_Delay\_Rd command and read back this commanded data argument.
- 2. Send the Veto\_Delay\_Wr command with a data argument of 5'h15 (21). Send the Veto\_Delay\_Rd command and read back this commanded data argument.
- 3. Send the Veto\_Delay\_Wr command with a data argument of 5'h0A (10). Send the Veto\_Delay\_Rd command and read back this commanded data argument.
- 4. Send the Veto\_Delay\_Wr command with a data argument of 5'h1F (31). Send the Veto\_Delay\_Rd command and read back this commanded data argument.
- 5. Send the Veto\_Delay\_Wr command with a data argument of 5'h5 (5). Send the Veto\_Delay\_Rd command and read back this commanded data argument.

# 6.2 HVBS Level Register Test

- 1. Send the HVBS\_Level\_Wr command with a data argument of 12'h0 (0). Send the HVBS\_Level\_Rd command and read back this commanded data argument.
- 2. Send the HVBS\_Level\_Wr command with a data argument of 12'h555 (1365). Send the HVBS Level Rd command and read back this commanded data argument.
- 3. Send the HVBS\_Level\_Wr command with a data argument of 12'hAAA (2730). Send the HVBS Level Rd command and read back this commanded data argument.
- 4. Send the HVBS\_Level\_Wr command with a data argument of 12'hFFF (4095). Send the HVBS Level Rd command and read back this commanded data argument.
- 5. Send the HVBS\_Level\_Wr command with a data argument of 12'h0 (0). Send the HVBS\_Level\_Rd command and read back this commanded data argument.

# 6.3 SAA Level Register Test

- 1. Send the SAA\_Level\_Wr command with a data argument of 12'h0 (0). Send the SAA\_Level\_Rd command and read back this commanded data argument.
- 2. Send the SAA\_Level\_Wr command with a data argument of 12'h555 (1365). Send the SAA\_Level\_Rd command and read back this commanded data argument.
- 3. Send the SAA\_Level\_Wr command with a data argument of 12'hAAA (2730). Send the SAA Level Rd command and read back this commanded data argument.
- 4. Send the SAA\_Level\_Wr command with a data argument of 12'hFFF (4095). Send the SAA Level Rd command and read back this commanded data argument.
- 5. Send the SAA\_Level\_Wr command with a data argument of 12'h0 (0). Send the SAA\_Level\_Rd command and read back this commanded data argument.

#### 6.4 Hold Delay Register Test

1. Send the Hold\_Delay\_Wr command with a data argument of 7'h0 (0). Send the Hold\_Delay\_Rd command and read back this commanded data argument.

- 2. Send the Hold\_Delay\_Wr command with a data argument of 7'h55 (85). Send the Hold\_Delay\_Rd command and read back this commanded data argument.
- 3. Send the Hold\_Delay\_Wr command with a data argument of 7'h2A (42). Send the Hold\_Delay\_Rd command and read back this commanded data argument.
- 4. Send the Hold\_Delay\_Wr command with a data argument of 7'h7F (127). Send the Hold\_Delay\_Rd command and read back this commanded data argument.
- 5. Send the Hold\_Delay\_Wr command with a data argument of 7'h1C (28). Send the Hold\_Delay\_Rd command and read back this commanded data argument.

#### 6.5 <u>Veto Width Register Test</u>

- 1. Send the Veto\_Width\_Wr command with a data argument of 3'h0 (0). Send the Veto\_Width\_Rd command and read back this commanded data argument.
- 2. Send the Veto\_Width\_Wr command with a data argument of 3'h5 (5). Send the Veto\_Width\_Rd command and read back this commanded data argument.
- 3. Send the Veto\_Width\_Wr command with a data argument of 3'h7 (7). Send the Veto\_Width\_Rd command and read back this commanded data argument.
- 4. Send the Veto\_Width\_Wr command with a data argument of 3'h2 (2). Send the Veto\_Width\_Rd command and read back this commanded data argument.

# 6.6 <u>HitMap Width Register Test</u>

- 1. Send the HitMap\_Width\_Wr command with a data argument of 4'h0 (0). Send the HitMap\_Width\_Rd command and read back this commanded data argument.
- 2. Send the HitMap\_Width\_Wr command with a data argument of 4'h5 (5). Send the HitMap\_Width\_Rd command and read back this commanded data argument.
- 3. Send the HitMap\_Width\_Wr command with a data argument of 4'hA (10). Send the HitMap\_Width\_Rd command and read back this commanded data argument.
- 4. Send the HitMap\_Width\_Wr command with a data argument of 4'hF (15). Send the HitMap Width Rd command and read back this commanded data argument.
- 5. Send the HitMap\_Width\_Wr command with a data argument of 4'h7 (7). Send the HitMap Width Rd command and read back this commanded data argument.

#### 6.7 <u>HitMap Deadtime Register Test</u>

- 1. Send the HitMap\_Deadtime\_Wr command with a data argument of 3'h0 (0). Send the HitMap\_Deadtime\_Rd command and read back this commanded data argument.
- 2. Send the HitMap\_Deadtime\_Wr command with a data argument of 3'h5 (5). Send the HitMap\_Deadtime\_Rd command and read back this commanded data argument.
- 3. Send the HitMap\_Deadtime\_Wr command with a data argument of 3'h2 (2). Send the HitMap\_Deadtime\_Rd command and read back this commanded data argument.
- 4. Send the HitMap\_Deadtime\_Wr command with a data argument of 3'h7 (7). Send the HitMap\_Deadtime\_Rd command and read back this commanded data argument.
- 5. Send the HitMap\_Deadtime\_Wr command with a data argument of 3'h3 (3). Send the HitMap\_Deadtime\_Rd command and read back this commanded data argument.

# 6.8 <u>HitMap Delay Register Test</u>

- 1. Send the HitMap\_Delay\_Wr command with a data argument of 5'h0 (0). Send the HitMap\_Delay\_Rd command and read back this commanded data argument.
- 2. Send the HitMap\_Delay\_Wr command with a data argument of 5'h15 (21). Send the HitMap Delay Rd command and read back this commanded data argument.
- 3. Send the HitMap\_Delay\_Wr command with a data argument of 5'h0A (10). Send the HitMap\_Delay\_Rd command and read back this commanded data argument.
- 4. Send the HitMap\_Delay\_Wr command with a data argument of 5'h1F (31). Send the HitMap\_Delay\_Rd command and read back this commanded data argument.
- 5. Send the HitMap\_Delay\_Wr command with a data argument of 5'h10 (16). Send the HitMap\_Delay\_Rd command and read back this commanded data argument.

# 6.9 PHA En0 Register Test

- 1. Send the PHA\_En0\_Wr command with a data argument of 16'h0 (0). Send the PHA\_En0\_Rd command and read back this commanded data argument.
- 2. Send the PHA\_En0\_Wr command with a data argument of 16'h5555 (21845). Send the PHA\_En0\_Rd command and read back this commanded data argument.
- 3. Send the PHA\_En0\_Wr command with a data argument of 16'hAAAA (43690). Send the PHA\_En0\_Rd command and read back this commanded data argument.
- 4. Send the PHA\_En0\_Wr command with a data argument of 16'hFFFF (65535). Send the PHA\_En0\_Rd command and read back this commanded data argument.

# 6.10 Veto En0 Register Test

- 1. Send the VETO\_En0\_Wr command with a data argument of 16'h0 (0). Send the VETO\_En0\_Rd command and read back this commanded data argument.
- 2. Send the VETO\_En0\_Wr command with a data argument of 16'h5555 (21845). Send the VETO En0 Rd command and read back this commanded data argument.
- 3. Send the VETO\_En0\_Wr command with a data argument of 16'hAAAA (43690). Send the VETO En0 Rd command and read back this commanded data argument.
- 4. Send the VETO\_En0\_Wr command with a data argument of 16'hFFFF (65535). Send the VETO En0 Rd command and read back this commanded data argument.

#### 6.11 PHA En1 Register Test

- 1. Send the PHA\_En1\_Wr command with a data argument of 2'h0 (0). Send the PHA\_En1\_Rd command and read back this commanded data argument.
- 2. Send the PHA\_En1\_Wr command with a data argument of 2'h1 (1). Send the PHA\_En1\_Rd command and read back this commanded data argument.
- 3. Send the PHA\_En1\_Wr command with a data argument of 2'h2 (2). Send the PHA\_En1\_Rd command and read back this commanded data argument.

4. Send the PHA\_En1\_Wr command with a data argument of 2'h3 (3). Send the PHA\_En1\_Rd command and read back this commanded data argument.

#### 6.12 Veto En1 Register Test

- 1. Send the VETO\_En1\_Wr command with a data argument of 2'h0 (0). Send the VETO\_En1\_Rd command and read back this commanded data argument.
- 2. Send the VETO\_En1\_Wr command with a data argument of 2'h1 (1). Send the VETO\_En1\_Rd command and read back this commanded data argument.
- 3. Send the VETO\_En1\_Wr command with a data argument of 2'h2 (2). Send the VETO\_En1\_Rd command and read back this commanded data argument.
- 4. Send the VETO\_En1\_Wr command with a data argument of 2'h3 (3). Send the VETO\_En1\_Rd command and read back this commanded data argument.

# 6.13 MaxPHA Register Test

- 1. Send the MaxPHA\_Wr command with a data argument of 5'h0 (0). Send the MaxPHA\_Rd command and read back this commanded data argument.
- 2. Send the MaxPHA\_Wr command with a data argument of 5'h15 (21). Send the MaxPHA\_Rd command and read back this commanded data argument.
- 3. Send the MaxPHA\_Wr command with a data argument of 5'h0A (10). Send the MaxPHA\_Rd command and read back this commanded data argument.
- 4. Send the MaxPHA\_Wr command with a data argument of 5'h1F (31). Send the MaxPHA\_Rd command and read back this commanded data argument.
- 5. Send the MaxPHA\_Wr command with a data argument of 5'h4 (4). Send the MaxPHA\_Rd command and read back this commanded data argument.

#### 6.14 GARC Mode Register Test

- \*\* Note this sequence must be followed exactly to preclude placing the GARC into the undesired mode of sending return data with incorrect parity.
  - 1. Send the GARC\_Mode\_Wr command with a data argument of 11'h2 (2). Send the GARC Mode Rd command and read back this commanded data argument.
  - 2. Send the GARC\_Mode\_Wr command with a data argument of 11'h4 (4). Send the GARC Mode Rd command and read back this commanded data argument.
  - 3. Send the GARC\_Mode\_Wr command with a data argument of 11'h8 (8). Send the GARC\_Mode\_Rd command and read back this commanded data argument.
  - 4. Send the GARC\_Mode\_Wr command with a data argument of 11'h10 (16). Send the GARC\_Mode\_Rd command and read back this commanded data argument.
  - 5. Send the GARC\_Mode\_Wr command with a data argument of 11'h20 (32). Send the GARC\_Mode\_Rd command and read back this commanded data argument.
  - 6. Send the GARC\_Mode\_Wr command with a data argument of 11'h40 (64). Send the GARC\_Mode\_Rd command and read back this commanded data argument.

- 7. Send the GARC\_Mode\_Wr command with a data argument of 11'h80 (128). Send the GARC Mode Rd command and read back this commanded data argument.
- 8. Send the GARC\_Mode\_Wr command with a data argument of 11'h100 (256). Send the GARC\_Mode\_Rd command and read back this commanded data argument.
- 9. Send the GARC\_Mode\_Wr command with a data argument of 11'h200 (512). Send the GARC Mode Rd command and read back this commanded data argument.
- 10. Send the GARC\_Mode\_Wr command with a data argument of 11'h400 (1024). Send the GARC Mode Rd command and read back this commanded data argument.
- 11. Send the GARC\_Mode\_Wr command with a data argument of 11'h300 (768). Send the GARC\_Mode\_Rd command and read back this commanded data argument.

# 6.15 PHA Threshold Channel 00 Register Test

- 1. Send the PHA\_Thresh00\_Wr command with a data argument of 12'h0 (0). Send the PHA\_Thresh00\_Rd command and read back this commanded data argument.
- 2. Send the PHA\_Thresh00\_Wr command with a data argument of 12'h555 (21845). Send the PHA\_Thresh00\_Rd command and read back this commanded data argument.
- 3. Send the PHA\_Thresh00\_Wr command with a data argument of 16'hAAA (43690). Send the PHA Thresh00 Rd command and read back this commanded data argument.
- 4. Send the PHA\_Thresh00\_Wr command with a data argument of 16'hFFF (65536). Send the PHA Thresh00 Rd command and read back this commanded data argument.
- 5. Send the PHA\_Thresh00\_Wr command with a data argument of 16'h45A (1114). Send the PHA\_Thresh00\_Rd command and read back this commanded data argument.

#### 6.16 PHA Threshold Channel 01 Register Test

- 1. Send the PHA\_Thresh01\_Wr command with a data argument of 16'h0 (0). Send the PHA\_Thresh01\_Rd command and read back this commanded data argument.
- 2. Send the PHA\_Thresh01\_Wr command with a data argument of 16'h5555 (21845). Send the PHA\_Thresh01\_Rd command and read back this commanded data argument.
- 3. Send the PHA\_Thresh01\_Wr command with a data argument of 16'hAAAA (43690). Send the PHA\_Thresh01\_Rd command and read back this commanded data argument.
- 4. Send the PHA\_Thresh01\_Wr command with a data argument of 16'hAAAA (65536). Send the PHA Thresh01 Rd command and read back this commanded data argument.
- 5. Send the PHA\_Thresh01\_Wr command with a data argument of 16'h45A (1114). Send the PHA\_Thresh01\_Rd command and read back this commanded data argument.

# 6.17 PHA Threshold Channel 02 Register Test

- 1. Send the PHA\_Thresh02\_Wr command with a data argument of 16'h0 (0). Send the PHA Thresh02 Rd command and read back this commanded data argument.
- 2. Send the PHA\_Thresh02\_Wr command with a data argument of 16'h5555 (21845). Send the PHA Thresh02 Rd command and read back this commanded data argument.
- 3. Send the PHA\_Thresh02\_Wr command with a data argument of 16'hAAAA (43690). Send the PHA\_Thresh02\_Rd command and read back this commanded data argument.

- 4. Send the PHA\_Thresh02\_Wr command with a data argument of 16'hAAAA (65536). Send the PHA\_Thresh02\_Rd command and read back this commanded data argument.
- 5. Send the PHA\_Thresh02\_Wr command with a data argument of 16'h45A (1114). Send the PHA\_Thresh02\_Rd command and read back this commanded data argument.

# 6.18 PHA Threshold Channel 03 Register Test

- 1. Send the PHA\_Thresh03\_Wr command with a data argument of 16'h0 (0). Send the PHA\_Thresh03\_Rd command and read back this commanded data argument.
- 2. Send the PHA\_Thresh03\_Wr command with a data argument of 16'h5555 (21845). Send the PHA Thresh03 Rd command and read back this commanded data argument.
- 3. Send the PHA\_Thresh03\_Wr command with a data argument of 16'hAAAA (43690). Send the PHA\_Thresh03\_Rd command and read back this commanded data argument.
- 4. Send the PHA\_Thresh03\_Wr command with a data argument of 16'hAAAA (65536). Send the PHA\_Thresh03\_Rd command and read back this commanded data argument.
- 5. Send the PHA\_Thresh03\_Wr command with a data argument of 16'h45A (1114). Send the PHA\_Thresh03\_Rd command and read back this commanded data argument.

# 6.19 PHA Threshold Channel 04 Register Test

- 1. Send the PHA\_Thresh04\_Wr command with a data argument of 16'h0 (0). Send the PHA\_Thresh04\_Rd command and read back this commanded data argument.
- 2. Send the PHA\_Thresh04\_Wr command with a data argument of 16'h5555 (21845). Send the PHA\_Thresh04\_Rd command and read back this commanded data argument.
- 3. Send the PHA\_Thresh04\_Wr command with a data argument of 16'hAAAA (43690). Send the PHA\_Thresh04\_Rd command and read back this commanded data argument.
- 4. Send the PHA\_Thresh04\_Wr command with a data argument of 16'hAAAA (65536). Send the PHA\_Thresh04\_Rd command and read back this commanded data argument.
- 5. Send the PHA\_Thresh04\_Wr command with a data argument of 16'h45A (1114). Send the PHA\_Thresh04\_Rd command and read back this commanded data argument.

#### 6.20 PHA Threshold Channel 05 Register Test

- 1. Send the PHA\_Thresh05\_Wr command with a data argument of 16'h0 (0). Send the PHA Thresh05 Rd command and read back this commanded data argument.
- 2. Send the PHA\_Thresh05\_Wr command with a data argument of 16'h5555 (21845). Send the PHA Thresh05 Rd command and read back this commanded data argument.
- 3. Send the PHA\_Thresh05\_Wr command with a data argument of 16'hAAAA (43690). Send the PHA Thresh05 Rd command and read back this commanded data argument.
- 4. Send the PHA\_Thresh05\_Wr command with a data argument of 16'hAAAA (65536). Send the PHA Thresh05 Rd command and read back this commanded data argument.
- 5. Send the PHA\_Thresh05\_Wr command with a data argument of 16'h45A (1114). Send the PHA\_Thresh05\_Rd command and read back this commanded data argument.

#### 6.21 PHA Threshold Channel 06 Register Test

- 1. Send the PHA\_Thresh06\_Wr command with a data argument of 16'h0 (0). Send the PHA\_Thresh06\_Rd command and read back this commanded data argument.
- 2. Send the PHA\_Thresh06\_Wr command with a data argument of 16'h5555 (21845). Send the PHA\_Thresh06\_Rd command and read back this commanded data argument.
- 3. Send the PHA\_Thresh06\_Wr command with a data argument of 16'hAAAA (43690). Send the PHA\_Thresh06\_Rd command and read back this commanded data argument.
- 4. Send the PHA\_Thresh06\_Wr command with a data argument of 16'hAAAA (65536). Send the PHA Thresh06 Rd command and read back this commanded data argument.
- 5. Send the PHA\_Thresh06\_Wr command with a data argument of 16'h45A (1114). Send the PHA\_Thresh06\_Rd command and read back this commanded data argument.

## 6.22 PHA Threshold Channel 07 Register Test

- 1. Send the PHA\_Thresh07\_Wr command with a data argument of 16'h0 (0). Send the PHA Thresh07 Rd command and read back this commanded data argument.
- 2. Send the PHA\_Thresh07\_Wr command with a data argument of 16'h5555 (21845). Send the PHA\_Thresh07\_Rd command and read back this commanded data argument.
- 3. Send the PHA\_Thresh07\_Wr command with a data argument of 16'hAAAA (43690). Send the PHA\_Thresh07\_Rd command and read back this commanded data argument.
- 4. Send the PHA\_Thresh07\_Wr command with a data argument of 16'hAAAA (65536). Send the PHA\_Thresh07\_Rd command and read back this commanded data argument.
- 5. Send the PHA\_Thresh07\_Wr command with a data argument of 16'h45A (1114). Send the PHA\_Thresh07\_Rd command and read back this commanded data argument.

#### 6.23 PHA Threshold Channel 08 Register Test

- 1. Send the PHA\_Thresh08\_Wr command with a data argument of 16'h0 (0). Send the PHA\_Thresh08\_Rd command and read back this commanded data argument.
- 2. Send the PHA\_Thresh08\_Wr command with a data argument of 16'h5555 (21845). Send the PHA Thresh08 Rd command and read back this commanded data argument.
- 3. Send the PHA\_Thresh08\_Wr command with a data argument of 16'hAAAA (43690). Send the PHA Thresh08 Rd command and read back this commanded data argument.
- 4. Send the PHA\_Thresh08\_Wr command with a data argument of 16'hAAAA (65536). Send the PHA Thresh08 Rd command and read back this commanded data argument.
- 5. Send the PHA\_Thresh08\_Wr command with a data argument of 16'h45A (1114). Send the PHA\_Thresh08\_Rd command and read back this commanded data argument.

#### 6.24 PHA Threshold Channel 09 Register Test

- 1. Send the PHA\_Thresh09\_Wr command with a data argument of 16'h0 (0). Send the PHA\_Thresh09\_Rd command and read back this commanded data argument.
- 2. Send the PHA\_Thresh09\_Wr command with a data argument of 16'h5555 (21845). Send the PHA\_Thresh09\_Rd command and read back this commanded data argument.

- 3. Send the PHA\_Thresh09\_Wr command with a data argument of 16'hAAAA (43690). Send the PHA Thresh09 Rd command and read back this commanded data argument.
- 4. Send the PHA\_Thresh09\_Wr command with a data argument of 16'hAAAA (65536). Send the PHA Thresh09 Rd command and read back this commanded data argument.
- 5. Send the PHA\_Thresh09\_Wr command with a data argument of 16'h45A (1114). Send the PHA\_Thresh09\_Rd command and read back this commanded data argument.

#### 6.25 PHA Threshold Channel 10 Register Test

- 1. Send the PHA\_Thresh10\_Wr command with a data argument of 16'h0 (0). Send the PHA\_Thresh10\_Rd command and read back this commanded data argument.
- 2. Send the PHA\_Thresh10\_Wr command with a data argument of 16'h5555 (21845). Send the PHA\_Thresh10\_Rd command and read back this commanded data argument.
- 3. Send the PHA\_Thresh10\_Wr command with a data argument of 16'hAAAA (43690). Send the PHA\_Thresh10\_Rd command and read back this commanded data argument.
- 4. Send the PHA\_Thresh10\_Wr command with a data argument of 16'hAAAA (65536). Send the PHA\_Thresh10\_Rd command and read back this commanded data argument.
- 5. Send the PHA\_Thresh10\_Wr command with a data argument of 16'h45A (1114). Send the PHA Thresh10 Rd command and read back this commanded data argument.

# 6.26 PHA Threshold Channel 11 Register Test

- 1. Send the PHA\_Thresh11\_Wr command with a data argument of 16'h0 (0). Send the PHA\_Thresh11\_Rd command and read back this commanded data argument.
- 2. Send the PHA\_Thresh11\_Wr command with a data argument of 16'h5555 (21845). Send the PHA\_Thresh11\_Rd command and read back this commanded data argument.
- 3. Send the PHA\_Thresh11\_Wr command with a data argument of 16'hAAAA (43690). Send the PHA\_Thresh11\_Rd command and read back this commanded data argument.
- 4. Send the PHA\_Thresh11\_Wr command with a data argument of 16'hAAAA (65536). Send the PHA\_Thresh11\_Rd command and read back this commanded data argument.
- 5. Send the PHA\_Thresh11\_Wr command with a data argument of 16'h45A (1114). Send the PHA\_Thresh11\_Rd command and read back this commanded data argument.

#### 6.27 PHA Threshold Channel 12 Register Test

- 1. Send the PHA\_Thresh12\_Wr command with a data argument of 16'h0 (0). Send the PHA\_Thresh12\_Rd command and read back this commanded data argument.
- 2. Send the PHA\_Thresh12\_Wr command with a data argument of 16'h5555 (21845). Send the PHA Thresh12 Rd command and read back this commanded data argument.
- 3. Send the PHA\_Thresh12\_Wr command with a data argument of 16'hAAAA (43690). Send the PHA Thresh12 Rd command and read back this commanded data argument.
- 4. Send the PHA\_Thresh12\_Wr command with a data argument of 16'hAAAA (65536). Send the PHA Thresh12 Rd command and read back this commanded data argument.
- 5. Send the PHA\_Thresh12\_Wr command with a data argument of 16'h45A (1114). Send the PHA\_Thresh12\_Rd command and read back this commanded data argument.

### 6.28 PHA Threshold Channel 13 Register Test

- 1. Send the PHA\_Thresh13\_Wr command with a data argument of 16'h0 (0). Send the PHA\_Thresh13\_Rd command and read back this commanded data argument.
- 2. Send the PHA\_Thresh13\_Wr command with a data argument of 16'h5555 (21845). Send the PHA\_Thresh13\_Rd command and read back this commanded data argument.
- 3. Send the PHA\_Thresh13\_Wr command with a data argument of 16'hAAAA (43690). Send the PHA\_Thresh13\_Rd command and read back this commanded data argument.
- 4. Send the PHA\_Thresh13\_Wr command with a data argument of 16'hAAAA (65536). Send the PHA Thresh13 Rd command and read back this commanded data argument.
- 5. Send the PHA\_Thresh13\_Wr command with a data argument of 16'h45A (1114). Send the PHA\_Thresh13\_Rd command and read back this commanded data argument.

# 6.29 PHA Threshold Channel 14 Register Test

- 1. Send the PHA\_Thresh14\_Wr command with a data argument of 16'h0 (0). Send the PHA Thresh14 Rd command and read back this commanded data argument.
- 2. Send the PHA\_Thresh14\_Wr command with a data argument of 16'h5555 (21845). Send the PHA\_Thresh14\_Rd command and read back this commanded data argument.
- 3. Send the PHA\_Thresh14\_Wr command with a data argument of 16'hAAAA (43690). Send the PHA\_Thresh14\_Rd command and read back this commanded data argument.
- 4. Send the PHA\_Thresh14\_Wr command with a data argument of 16'hAAAA (65536). Send the PHA\_Thresh14\_Rd command and read back this commanded data argument.
- 5. Send the PHA\_Thresh14\_Wr command with a data argument of 16'h45A (1114). Send the PHA\_Thresh14\_Rd command and read back this commanded data argument.

## 6.30 PHA Threshold Channel 15 Register Test

- 1. Send the PHA\_Thresh15\_Wr command with a data argument of 16'h0 (0). Send the PHA Thresh15 Rd command and read back this commanded data argument.
- 2. Send the PHA\_Thresh15\_Wr command with a data argument of 16'h5555 (21845). Send the PHA Thresh15 Rd command and read back this commanded data argument.
- 3. Send the PHA\_Thresh15\_Wr command with a data argument of 16'hAAAA (43690). Send the PHA\_Thresh15\_Rd command and read back this commanded data argument.
- 4. Send the PHA\_Thresh15\_Wr command with a data argument of 16'hAAAA (65536). Send the PHA\_Thresh15\_Rd command and read back this commanded data argument.
- 5. Send the PHA\_Thresh15\_Wr command with a data argument of 16'h45A (1114). Send the PHA\_Thresh15\_Rd command and read back this commanded data argument.

## 6.31 PHA Threshold Channel 16 Register Test

1. Send the PHA\_Thresh16\_Wr command with a data argument of 16'h0 (0). Send the PHA\_Thresh16\_Rd command and read back this commanded data argument.

- 2. Send the PHA\_Thresh16\_Wr command with a data argument of 16'h5555 (21845). Send the PHA Thresh16 Rd command and read back this commanded data argument.
- 3. Send the PHA\_Thresh16\_Wr command with a data argument of 16'hAAAA (43690). Send the PHA Thresh16 Rd command and read back this commanded data argument.
- 4. Send the PHA\_Thresh16\_Wr command with a data argument of 16'hAAAA (65536). Send the PHA\_Thresh16\_Rd command and read back this commanded data argument.
- 5. Send the PHA\_Thresh16\_Wr command with a data argument of 16'h45A (1114). Send the PHA\_Thresh16\_Rd command and read back this commanded data argument.

#### 6.32 PHA Threshold Channel 17 Register Test

- 1. Send the PHA\_Thresh17\_Wr command with a data argument of 16'h0 (0). Send the PHA\_Thresh17\_Rd command and read back this commanded data argument.
- 2. Send the PHA\_Thresh17\_Wr command with a data argument of 16'h5555 (21845). Send the PHA\_Thresh17\_Rd command and read back this commanded data argument.
- 3. Send the PHA\_Thresh17\_Wr command with a data argument of 16'hAAAA (43690). Send the PHA Thresh17 Rd command and read back this commanded data argument.
- 4. Send the PHA\_Thresh17\_Wr command with a data argument of 16'hAAAA (65536). Send the PHA\_Thresh17\_Rd command and read back this commanded data argument.
- 5. Send the PHA\_Thresh17\_Wr command with a data argument of 16'h45A (1114). Send the PHA\_Thresh17\_Rd command and read back this commanded data argument.

#### 6.33 ADC TACQ Register Test

- 1. Send the ADC\_TACQ\_Wr command with a data argument of 6'h0 (0). Send the ADC\_TACQ\_Rd command and read back this commanded data argument.
- 2. Send the ADC\_TACQ\_Wr command with a data argument of 6'h15 (21). Send the ADC\_TACQ\_Rd command and read back this commanded data argument.
- 3. Send the ADC\_TACQ\_Wr command with a data argument of 6'h2A (42). Send the ADC\_TACQ\_Rd command and read back this commanded data argument.
- 4. Send the ADC\_TACQ\_Wr command with a data argument of 6'h3F (63). Send the ADC TACQ Rd command and read back this commanded data argument.
- 5. Send the ADC\_TACQ\_Wr command with a data argument of 6'h0 (0). Send the ADC\_TACQ\_Rd command and read back this commanded data argument.
- 6. Send the GARC Reset command to ensure all registers are at the proper initial value.

# 6.34 GAFE ASICs Mode Register Test

This section tests the proper functioning of the GAFE mode register. Repeat for all GAFE ASICs present using valid GAFE addressing.

- 1. Send the GAFE Mode Write command to the GAFE being tested with a data field of 16'h00 (0).
- 2. Send the GAFE\_Mode\_Read command. The data field in the return data stream should be 16'h00 (0).
- 3. Send the GAFE Mode Write command to the GAFE being tested with a data field of 16'hFF (255).

- 4. Send the GAFE\_Mode\_Read command. The data field in the return data stream should be 16'hFF (255).
- 5. Send the GAFE\_Mode\_Write command to the GAFE being tested with a data field of 16'h30 (48).
- 6. Send the GAFE\_Mode\_Read command. The data field in the return data stream should be 16'h30 (48).

#### 6.35 GAFE ASIC VETO DAC Register Test

This section tests the proper functioning of the GAFE DAC #1 register. Repeat for all GAFE ASICs present, using valid GAFE addressing.

- 1. Send the GAFE DAC1 Write command to the GAFE being tested with a data field of 16'h00 (0).
- 2. Send the GAFE\_DAC1\_Read command. The data field in the return data stream should be 16'h00 (0).
- 3. Send the GAFE DAC1 Write command to the GAFE being tested with a data field of 16'h3F (63).
- 4. Send the GAFE\_DAC1\_Read command. The data field in the return data stream should be 16'h3F (63).
- 5. Send the GAFE DAC1 Write command to the GAFE being tested with a data field of 16'h39 (57).
- 6. Send the GAFE\_DAC1\_Read command. The data field in the return data stream should be 16'h39 (57).

## 6.36 GAFE ASIC VETO VERNIER Register Test

This section tests the proper functioning of the GAFE DAC #2 register. Repeat for all GAFE ASICs present, using valid GAFE addressing.

- 1. Send the GAFE DAC2 Write command to the GAFE being tested with a data field of 16'h00 (0).
- 2. Send the GAFE\_DAC2\_Read command. The data field in the return data stream should be 16'h00 (0).
- 3. Send the GAFE DAC2 Write command to the GAFE being tested with a data field of 16'h3F (63).
- 4. Send the GAFE\_DAC2\_Read command. The data field in the return data stream should be 16'h3F (63).
- 5. Send the GAFE DAC2 Write command to the GAFE being tested with a data field of 16'h26 (38).
- 6. Send the GAFE\_DAC2\_Read command. The data field in the return data stream should be 16'h26 (38).

# 6.37 GAFE ASIC HLD Register Test

This section tests the proper functioning of the GAFE DAC #3 register. Repeat for all GAFE ASICs present, using valid GAFE addressing.

1. Send the GAFE DAC3 Write command to the GAFE being tested with a data field of 16'h00 (0).

- 2. Send the GAFE\_DAC3\_Read command. The data field in the return data stream should be 16'h00 (0).
- 3. Send the GAFE DAC3 Write command to the GAFE being tested with a data field of 16'h3F (63).
- 4. Send the GAFE\_DAC3\_Read command. The data field in the return data stream should be 16'h3F (63).
- 5. Send the GAFE DAC3 Write command to the GAFE being tested with a data field of 16'h37 (55).
- 6. Send the GAFE\_DAC3\_Read command. The data field in the return data stream should be 16'h37 (55).

#### 6.38 GAFE ASIC BIAS Register Test

This section tests the proper functioning of the GAFE DAC #4 register. Repeat for all GAFE ASICs present, using valid GAFE addressing.

- 1. Send the GAFE DAC4 Write command to the GAFE being tested with a data field of 16'h00 (0).
- 2. Send the GAFE\_DAC4\_Read command. The data field in the return data stream should be 16'h00 (0).
- 3. Send the GAFE DAC4 Write command to the GAFE being tested with a data field of 16'h3F (63).
- 4. Send the GAFE\_DAC4\_Read command. The data field in the return data stream should be 16'h3F (63).
- 5. Send the GAFE\_DAC4\_Write command to the GAFE being tested with a data field of 16'h20 (32).
- 6. Send the GAFE\_DAC4\_Read command. The data field in the return data stream should be 16'h20 (32).

## 6.39 GAFE ASIC TCI Register Test

This section tests the proper functioning of the GAFE DAC #5 register. Repeat for all GAFE ASICs present, using valid GAFE addressing.

- 1. Send the GAFE DAC5 Write command to the GAFE being tested with a data field of 16'h00 (0).
- 2. Send the GAFE\_DAC5\_Read command. The data field in the return data stream should be 16'h00 (0).
- 3. Send the GAFE DAC5 Write command to the GAFE being tested with a data field of 16'h3F (63).
- 4. Send the GAFE\_DAC5\_Read command. The data field in the return data stream should be 16'h3F (63).
- 5. Send the GAFE DAC5 Write command to the GAFE being tested with a data field of 16'h00 (0).
- 6. Send the GAFE\_DAC5\_Read command. The data field in the return data stream should be 16'h00 (0).

At the successful conclusion of this section, the GARC commandable register bits have been demonstrated to be functional with all bits toggling as commanded.

### 6.40 Test of the GAFE Parity Command Circuitry

This section tests the proper functioning of the GAFE parity command circuitry. At least one GAFE ASIC needs to be connected to the GARC under test to perform this section. GAFE commands must be sent to the same address as the hardwired GAFE address. The GAFE logic nominally expects odd parity. When the GARC command to change the GAFE command message to even parity is executed, the GAFE should no longer respond to messages from the GARC. When the GAFE parity is again commanded to be odd, nominal response should resume.

This test may be automated using the LabView GSE via the **GAFE Parity Command Test.txt** script.

- 1. Send the GARC\_Mode\_Wr command with a decimal data argument of 768 (0x300). Verify this command with the GARC Mode Rd command.
- 2. Send the GAFE command GAFE\_Mode\_Rd and verify that the GAFE logic responds with the contents of the mode register.
- 3. Send the GARC\_Mode\_Wr command with a decimal data argument of 896 (0x380). Verify this command with the GARC\_Mode\_Rd command.
- 4. Send the GAFE command GAFE\_Mode\_Rd and verify that the GAFE logic does not respond to this command (e.g., the command is rejected due to incorrect parity).
- 5. Send the GARC\_Mode\_Wr command with a decimal data argument of 768 (0x300). Verify this command with the GARC Mode Rd command.
- 6. Send the GAFE command GAFE\_Mode\_Rd and verify that the GAFE logic responds with the contents of the mode register.

# 6.41 Test of the GARC Parity Error Detection and Error Generation

This section tests the proper functioning of the GARC return data parity select bit and the GARC's ability to detect command and data parity errors.

This test may be automated using the LabView GSE via the GARC Parity Test.txt script.

- 1. Send the GARC Reset command.
- 2. Send the GARC Status command. The data field in the return data stream should be decimal 24.
- 3. Send the GARC\_Mode command with a data argument of decimal 769, a command to return event data with even parity.
- 4. Send the GARC\_Status command. The data field in the return data stream should show an AEM parity error.
- 5. Send the GARC\_Mode command with a data argument of decimal 768, a command back to odd parity, the nominal mode.
- 6. Send the GARC\_Status command. The data field in the return data stream should be decimal 24. The AEM should indicate nominal parity (no errors).
- 7. Send the GARC\_Reset command to reinitialize all GARC registers. Ready to test Command and Data parity errors.
- 8. Send the GARC Diagnostic command and verify that bits 15:12 in the return data word are 4'b0000.
- 9. Send the GARC Version command.
- 10. Send the GARC Diagnostic command and verify that bits 15:12 in the return data word are 4'b0000.

- 11. Send the Command Register command and verify that the return data is 16'h0000.
- 12. Send the even command parity (i.e., error) command: 34'h2404C0001.
- 13. Send the GARC Diagnostic command and verify that bits 15:12 in the return data word are 4'b1101.
- 14. Send the Command Register command and verify that the return data is 16'h404E.
- 15. At the successful conclusion of this section, please document this fact by making an entry in the copy of the Comprehensive Performance Test Record associated with this procedure.

# 6.42 Test of the GARC Diagnostic Status Register

This test may be automated using the LabView GSE via the **GARC Diagnostic Status Reg Test.tst** script.

- 1. Send the GARC Reset command to initialize the GARC registers.
- 2. Send the GARC\_Mode\_Rd command. The data field in the return data stream should be decimal 768.
- 3. Send the GARC\_Status command. The data field in the return data stream should be decimal 24.
- 4. Send the GARC\_Cmd\_Reg command. The data field in the return data stream should be decimal 0.
- 5. Send the GARC\_Diagnostic command. The most significant four bits in the return data stream are the Diagnostic bits. The remaining 12 bits are state machine loop and command counters and the total should not be zero. The data field in the return data stream should be decimal 771.

## 6.43 Command Counter Test

This test may be automated using the LabView GSE via the GARC Command Counter Test.txt script.

- 1. Send the GARC Reset command to initialize the GARC registers.
- 2. Send the GARC\_Diagnostic command. The value in bits 7:0 of the returned data word should have the value 0.
- 3. Send the GARC Version command ten times.
- 4. Send the GARC\_Diagnostic command. The value of the returned data word should have the value 2827.

# 6.44 Test of the Look-At-Me Circuitry

This section tests the proper functioning of the GARC Look-At-Me circuitry. The GARC has the capability to receive commands from either the primary side or secondary side. The selection of which set of receivers to listen to is controlled by the Look-At-Me circuitry. This circuitry toggles the status of the receiving side based upon receipt of a special command pattern (e.g., **34'h24153D721**). This the equivalent of sending a GARC configuration command to addr 1, function 4, with a data pattern of 60304.

Another way to look at the bit pattern (in a format like the ICD would present it) would be:

```
1001 == configuration command

0 == GARC

00001 == address 1
```

0 == write 1 == a command with data 0100 == function 4 1 == command parity 16'h == EB90 == data field (60304) 0 == data parity

## This test may be automated using the LabView GSE via the GARC Look At Me Test.txt script.

Turn on the system and send a Look-at-me command. Send the GARC\_Status command. The data field in the return data stream should be decimal 24. Bit 0 (LSB) of the Status register represents the Look-At-Me status (0 = A, 1 = B).. Set the GSE to the Secondary side, Send the GARC\_Status command. Observe that there is no response from the GARC.

Send the Look\_At\_Me command to the GARC from the secondary side interface. Send the GARC\_Status command. The data field in the return data should be decimal 25 (with the LSB = 1, indicating the Look-At-Me status is B side). Set the GSE for the Primary side and send the GARC\_Status command. Observe that there is no response from the GARC. Send the Look\_At\_Me command to the GARC from the primary side interface. Send the GARC\_Status command. The data field in the return data should be decimal 24 (with the LSB = 0, indicating the Look-At-Me status is A side).

1.

This concludes the test of the GARC Look-At-Me circuitry. At the successful conclusion of this section, please document this fact by making an entry in the copy of the Comprehensive Performance Test Record associated with this procedure.

# 7.0 Test of the GARC PHA Functions

This section tests the proper functions and commandability of the event data processor as it handles the PHA Data from the GAFE's

# 7.1 <u>Maximum PHA Return Test</u>

This section tests the proper functioning of the event data processor as it handles the Maximum Number of PHA words command.

This test may be automated using the LabView GSE via the GARC Max PHA Return Test.txt script

- 1. Send the Max\_PHA\_Wr command with a data argument of 18. Send the Max\_PHA\_Rd command and verify that the data value has been set. Send the Trigger\_ZS command and verify that the event data processor sends back 18 PHA words.
- 2. Repeat the previous step with a data argument of 17.
- 3. Repeat the previous step with a data argument of 16.
- 4. Repeat the previous step with a data argument of 15.
- 5. Repeat the previous step with a data argument of 14.
- 6. Repeat the previous step with a data argument of 13.
- 7. Repeat the previous step with a data argument of 12.
- 8. Repeat the previous step with a data argument of 11.
- 9. Repeat the previous step with a data argument of 10.
- 10. Repeat the previous step with a data argument of 9.
- 11. Repeat the previous step with a data argument of 8.
- 12. Repeat the previous step with a data argument of 7.
- 13. Repeat the previous step with a data argument of 6.
- 14. Repeat the previous step with a data argument of 5.
- 15. Repeat the previous step with a data argument of 4.
- 16. Repeat the previous step with a data argument of 3.
- 17. Repeat the previous step with a data argument of 2.
- 18. Repeat the previous step with a data argument of 1.
- 19. Repeat the previous step with a data argument of 0.
- 20. Send the GARC\_Reset command to restore the Max\_PHA number to the default. This completes the test of the GARC MAX\_PHA function. At the successful conclusion of this section, please document this fact by making an entry in the copy of the Comprehensive Performance Test Record associated with this procedure.

# 7.2 PHA Enable/Disable Test

This section tests the proper functioning of the event data processor as it handles the PHA enables and disables in selection of PHA words for transmission.

This test may be automated using the LabView GSE via the **GARC PHA Enable Test.txt** script.

- 1. Send the PHA\_En0\_Wr command with a data argument of decimal 'hFFFF (65535). Verify this value with the PHA\_En0\_Rd command. This enables channels 0-15.
- 2. Send the PHA\_En1\_Wr command with a data argument of decimal 3. Verify this value with the PHA En1 Rd command. This enables channels 16 and 17.
- 3. Send the Trigger\_NOZS command. The event data processor should respond with 18 PHA words during event readout.
- 4. Send the PHA\_En0\_Wr command with a data argument of 'hFFFE (65534). Verify this value with the PHA\_En0\_Rd command. Send the Trigger\_NOZS command. The event processor should respond with all PHA words except channel 0.
- 5. Send the PHA\_En0\_Wr command with a data argument of 'hFFFD (65533). Verify this value with the PHA\_En0\_Rd command. Send the Trigger\_NOZS command. The event processor should respond with all PHA words except channel 1.
- 6. Send the PHA\_En0\_Wr command with a data argument of 'hFFFB (65531). Verify this value with the PHA\_En0\_Rd command. Send the Trigger\_NOZS command. The event processor should respond with all PHA words except channel 2.
- 7. Send the PHA\_En0\_Wr command with a data argument of 'hFFF7 (65527). Verify this value with the PHA\_En0\_Rd command. Send the Trigger\_NOZS command. The event processor should respond with all PHA words except channel 3.
- 8. Send the PHA\_En0\_Wr command with a data argument of 'hFFEF (65519). Verify this value with the PHA\_En0\_Rd command. Send the Trigger\_NOZS command. The event processor should respond with all PHA words except channel 4.
- 9. Send the PHA\_En0\_Wr command with a data argument of 'hFFDF (65503). Verify this value with the PHA\_En0\_Rd command. Send the Trigger\_NOZS command. The event processor should respond with all PHA words except channel 5.
- 10. Send the PHA\_En0\_Wr command with a data argument of 'hFFBF (65471). Verify this value with the PHA\_En0\_Rd command. Send the Trigger\_NOZS command. The event processor should respond with all PHA words except channel 6.
- 11. Send the PHA\_EnO\_Wr command with a data argument of 'hFF7F (65407). Verify this value with the PHA\_EnO\_Rd command. Send the Trigger\_NOZS command. The event processor should respond with all PHA words except channel 7.
- 12. Send the PHA\_En0\_Wr command with a data argument of 'hFEFF (65279). Verify this value with the PHA\_En0\_Rd command. Send the Trigger\_NOZS command. The event processor should respond with all PHA words except channel 8.
- 13. Send the PHA\_En0\_Wr command with a data argument of 'hFDFF (65023). Verify this value with the PHA\_En0\_Rd command. Send the Trigger\_NOZS command. The event processor should respond with all PHA words except channel 9.
- 14. Send the PHA\_En0\_Wr command with a data argument of 'hFBFF (64511). Verify this value with the PHA\_En0\_Rd command. Send the Trigger\_NOZS command. The event processor should respond with all PHA words except channel 10.

- 15. Send the PHA\_En0\_Wr command with a data argument of 'hF7FF (63487). Verify this value with the PHA\_En0\_Rd command. Send the Trigger\_NOZS command. The event processor should respond with all PHA words except channel 11.
- 16. Send the PHA\_En0\_Wr command with a data argument of 'hEFFF (61439). Verify this value with the PHA\_En0\_Rd command. Send the Trigger\_NOZS command. The event processor should respond with all PHA words except channel 12.
- 17. Send the PHA\_En0\_Wr command with a data argument of 'hDFFF (57343). Verify this value with the PHA\_En0\_Rd command. Send the Trigger\_NOZS command. The event processor should respond with all PHA words except channel 13.
- 18. Send the PHA\_En0\_Wr command with a data argument of 'hBFFF (49151). Verify this value with the PHA\_En0\_Rd command. Send the Trigger\_NOZS command. The event processor should respond with all PHA words except channel 14.
- 19. Send the PHA\_En0\_Wr command with a data argument of 'h7FFF (32767). Verify this value with the PHA\_En0\_Rd command. Send the Trigger\_NOZS command. The event processor should respond with all PHA words except channel 15.
- 20. Send the PHA\_EnO\_Wr command with a data argument of 'hFFFF (65535). Verify this value with the PHA\_EnO\_Rd command. Send the Trigger\_NOZS command. The event processor should respond with all PHA words.
- 21. Send the PHA\_En1\_Wr command with a data argument of 2. Verify this value with the PHA\_En1\_Rd command. Send the Trigger\_NOZS command. The event processor should respond with all PHA words except channel 16.
- 22. Send the PHA\_En1\_Wr command with a data argument of 1. Verify this value with the PHA\_En1\_Rd command. Send the Trigger\_NOZS command. The event processor should respond with all PHA words except channel 17.
- 23. Send the GARC\_Reset command to reinitialize all GARC registers. This completes the testing of the PHA enable and disable register bits. At the successful conclusion of this section, please document this fact by making an entry in the copy of the Comprehensive Performance Test Record associated with this procedure.

#### 7.3 PHA Threshold Verification Test

This section tests the proper functioning of each of the 18 PHA thresholding circuits. The intent of the circuits is such that the ZS Map bit is set active high for a given PHA word if either the range bit is high or the 12 bit PHA word is greater than the PHA threshold.

This test may be automated using the LabView GSE via the **GARC Chip PHA Threshold Test.txt** script.

- 1. Send the GARC Reset command.
- 2. Send the Max PHA Wr command with a data argument of 18.
- 3. Send the PHA Thresh00 Wr command with a data argument of 100.
- 4. Repeat these steps for channels 01 through 17.
- 5. Send the TRIG ZS command. All 18 channels of PHA should be returned.
- 6. Send the PHA\_Thresh00\_Wr command with a data argument of 2000. Verify with the PHA Thresh00 Rd command.
- 7. Send the TRIG\_ZS command. All PHA channels except for channel 0 should be returned in the event data.
- 8. Send the PHA\_Thresh01\_Wr command with a data argument of 3000 and set PHA Thresh00 back to 100.Verify with the PHA\_ThreshXX\_Rd command.

- 9. Send the TRIG\_ZS command. All PHA channels except for channel 1 should be returned in the event data.
- 10. Repeat the above two steps serially for channels 2 17, verifying in each case that the proper event word is zero suppressed in the event data.
- 11. Send the GARC\_Reset command to restore all values to the power-on defaults.


This completes the PHA Threshold Verification section of the procedure. Record the successful completion of this test in the Test Record at the end of this procedure.

#### 8.0 Test of the MAX5121 DAC and Associated High Voltage Supply Control Functions

This section tests the proper commanding of the MAX5121 DAC and verify's the High Voltage Supply interface controls.

## 8.1 Capture of the DAC Control Signals

- 1. Connect the probe on channel 1 to NDAC\_CS. Set the scope to trigger on the negedge of this signal. This is J7-4 on the GARC test board.
- 2. Connect the probe on channel 2 to DAC\_CLK. (J7-1)
- 3. Connect the probe on channel 3 to DAC\_DATA. (J7-2)
- 4. Connect the probe on channel 4 to DAC READBACK. (J7-3)
- 5. Send the HVBS\_Level\_Wr command with a data argument of hex A5A (decimal 2650). Send the HVBS Level Rd command to verify.
- 6. Check that the scope is armed and then send the Use\_HV\_Nominal\_Wr command. The scope should trigger and the following waveform should be displayed. Send the command twice the DAC\_Read Back signal should be the same as the DAC\_Data except it will be delayed one clock cycle. Verify that the DAC clock is nominally 5 MHz \_\_\_\_\_ (check)

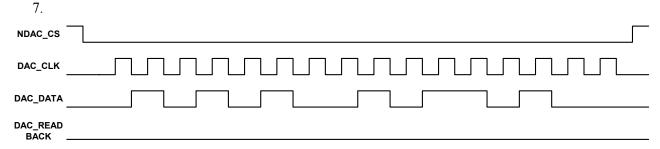

#### DAC DATA WRITE WITH DATA PATTERN HEX A5A

#### DAVE – SHOW THE DAC READBACK PULSES AFTER THE SECOND WR COMMAND

- 8. Check that the scope is armed and then send the Use\_HV\_Nominal\_Rd command. The software readback should capture the following value in the 16 bit return word: hex F4B4 (decimal 31348). This value may also be seen on the DAC DATA READBACK scope trace.
- 9. Move the probe on channel 1 to NDAC\_CLR (J7-5 of the GARC Test Board). Verify the scope is armed and send the GARC\_Reset command. The scope should trigger and a valid active low clear signal should be observed on the scope.

a.	Duration of the RESET pulse:	(expected	l ∼ 150 n	ıS`
----	------------------------------	-----------	-----------	-----

#### 8.2 <u>Test of the GARC SAA/HV Normal Modes</u>

This section tests the proper functioning of the circuitry that commands the MAX5121 DAC.

- 1. Send the HVBS\_Level\_Wr command with a data argument of decimal 2048. Send the HVBS Level Rd command to verify the write command.
- 2. Send the SAA\_Level\_Wr command with a data argument of decimal 1024. Send the SAA Level Rd command to verify.

3.	This is J5-3 on the GARC test board. <b>Value observed:</b>
4.	Using a multimeter on the DAC output, verify that the MAX5121 output is at 0V. This is J5-1 on the GARC test board. <b>Value observed:</b>
5.	
6.	Send the Use_HV_Nominal command. Verify that the MAX5121 output goes to half scale, e.g., 0.625 V at J5-1. Value observed:
7.	Send the DAC_HVReg_Rd command and verify the return data pattern from the MAX5121 DAC is decimal 10240.
8.	Send the Use_SAA_Level command. Verify that the MAX5121 output goes to 1/4 scale, e.g., 0.312V at J5-1 . <b>Value observed:</b>
9.	Send the DAC_SAAReg_Rd command and verify the return data pattern from the MAX5121 DAC is decimal 9216.
10.	Send the GARC Reset command. Verify that the MAX5121 output goes to 0 V.

## 8.3 Test of the HVBS Triple Modular Redundancy Circuitry

This section tests the proper functioning of the GARC HVBS enable circuitry. Each pattern in the TMR logic will be tested to verify proper recovery from a single event upset. The GARC HV\_ENABLE\_1 pin is 185 (J7-6) and the HV\_ENABLE\_2 pins is 186 (J7-7). A truth table for proper TMR circuitry function is detailed below. This test may be automated using the LabView GSE via the **GARC HV Enable Test.txt** script.

Enable Bit A	Enable Bit B	Enable Bit C	HV Enable Output
0	0	0	0
0	0	1	0
0	1	0	0
0	1	1	1
1	0	0	0
1	0	1	1
1	1	0	1
1	1	1	1

HV Enable 1 is on J7-6 and HV Enable 2 is on J7-7 on the GARC test board.

- 1. Send the GARC\_Mode\_Wr command with a data argument of 768 and verify the data with the GARC\_Mode\_Rd command.
- 2. Send the GARC\_Status command. The data field in the return data stream should show that bits 1 and 2 are 0, indicating that HVBS 1 and 2, respectively, are disabled. The data field value should be 24. Verify that GARC pins 185 and 186 are at 0V.
- 3. Send the GARC\_Mode\_Wr command with decimal argument 770 and verify the data with the GARC\_Mode\_Rd command. Send the GARC\_Status command and verify that HVBS 1 is disabled and HVBS 2 is disabled. The data field value should be 24. Verify that GARC pins 185 and 186 are at 0V.

- 4. Send the GARC\_Mode\_Wr command with decimal argument 772 and verify the data with the GARC\_Mode\_Rd command. Send the GARC\_Status command and verify that HVBS 1 is disabled and HVBS 2 is disabled. The data field value should be 24. Verify that GARC pins 185 and 186 are at 0V.
- 5. Send the GARC\_Mode\_Wr command with decimal argument 774 and verify the data with the GARC\_Mode\_Rd command. Send the GARC\_Status command and verify that HVBS 1 is enabled and HVBS 2 is disabled. The data field value should be 26. Verify that GARC pins 185 is at 3.3V and pin 186 is at 0V.
- 6. Send the GARC\_Mode\_Wr command with decimal argument 776 and verify the data with the GARC\_Mode\_Rd command. Send the GARC\_Status command and verify that HVBS 1 is disabled and HVBS 2 is disabled. The data field value should be 24. Verify that GARC pins 185 is at 0V and pin 186 is at 0V.
- 7. Send the GARC\_Mode\_Wr command with decimal argument 778 and verify the data with the GARC\_Mode\_Rd command. Send the GARC\_Status command and verify that HVBS 1 is enabled and HVBS 2 is disabled. The data field value should be 26. Verify that GARC pins 185 is at 3.3V and pin 186 is at 0V.
- 8. Send the GARC\_Mode\_Wr command with decimal argument 780 and verify the data with the GARC\_Mode\_Rd command. Send the GARC\_Status command and verify that HVBS 1 is enabled and HVBS 2 is disabled. The data field value should be 26. Verify that GARC pins 185 is at 3.3V and pin 186 is at 0V.
- 9. Send the GARC\_Mode\_Wr command with decimal argument 782 and verify the data with the GARC\_Mode\_Rd command. Send the GARC\_Status command and verify that HVBS 1 is enabled and HVBS 2 is disabled. The data field value should be 26. Verify that GARC pins 185 is at 3.3V and pin 186 is at 0V.
- 10. Send the GARC\_Mode\_Wr command with decimal argument 784 and verify the data with the GARC\_Mode\_Rd command. Send the GARC\_Status command and verify that HVBS 1 is disabled and HVBS 2 is disabled. The data field value should be 24. Verify that GARC pins 185 is at 0V and pin 186 is at 0V.
- 11. Send the GARC\_Mode\_Wr command with decimal argument 800 and verify the data with the GARC\_Mode\_Rd command. Send the GARC\_Status command and verify that HVBS 1 is disabled and HVBS 2 is disabled. The data field value should be 24. Verify that GARC pins 185 is at 0V and pin 186 is at 0V.
- 12. Send the GARC\_Mode\_Wr command with decimal argument 816 and verify the data with the GARC\_Mode\_Rd command. Send the GARC\_Status command and verify that HVBS 1 is disabled and HVBS 2 is enabled. The data field value should be 28. Verify that GARC pins 185 is at 0V and pin 186 is at 3.3V.
- 13. Send the GARC\_Mode\_Wr command with decimal argument 832 and verify the data with the GARC\_Mode\_Rd command. Send the GARC\_Status command and verify that HVBS 1 is disabled and HVBS 2 is disabled. The data field value should be 24. Verify that GARC pins 185 is at 0V and pin 186 is at 0V.
- 14. Send the GARC\_Mode\_Wr command with decimal argument 848 and verify the data with the GARC\_Mode\_Rd command. Send the GARC\_Status command and verify that HVBS 1 is disabled and HVBS 2 is enabled. The data field value should be 28. Verify that GARC pins 185 is at 0V and pin 186 is at 3.3V.
- 15. Send the GARC\_Mode\_Wr command with decimal argument 864 and verify the data with the GARC Mode Rd command. Send the GARC Status command and verify that HVBS 1 is disabled

- and HVBS 2 is enabled. The data field value should be 28. Verify that GARC pins 185 is at 0V and pin 186 is at 3.3V.
- 16. Send the GARC\_Mode\_Wr command with decimal argument 880 and verify the data with the GARC\_Mode\_Rd command. Send the GARC\_Status command and verify that HVBS 1 is disabled and HVBS 2 is enabled. The data field value should be 28. Verify that GARC pins 185 is at 0V and pin 186 is at 3.3V.
- 17. Send the GARC\_Mode\_Wr command with decimal argument xxx and verify the data with the GARC\_Mode\_Rd command. Measure the voltage at the two HV\_ENABLE pins:

a.	HV_ENABLE_1 voltage:	$\underline{\qquad} (expected \sim 3.2V)$
b.	HV ENABLE 2 voltage:	(expected ~ 3.2V)

- 18. Send the GARC\_Mode\_Wr command with decimal argument 768 and verify the data with the GARC\_Mode\_Rd command. Measure the voltage at the two HV\_ENABLE pins:
  - a. HV\_ENABLE\_1 voltage: \_\_\_\_\_\_ (expected ~ 0.015V)
    b. HV\_ENABLE\_2 voltage: \_\_\_\_\_\_ (expected ~ 0.015V)
- 19. Send the GARC\_Reset command. Verify that GARC pins 185 is at 0V and pin 186 is at 0V.

This completes the test of the HVBS enable/disable TMR circuitry.


#### 9.0 GARC Test Pin Mux Verification

This section tests the proper functionality, switch the GARC test pin between the "Live" and "HitMap Test" outputs. The discriminator signal from the pulse generator is added to the GAFE simulator board at J3-3.

- 1. Send the GARC\_Mode\_Wr command with a data argument of 1792 to switch the GARC test pin mux to view the "live" signal. Send the GARC\_Mode\_Rd command to verify the register data. When configuration commands are sent, the "live" signal should go inactive low during the state machine busy time. This may be verified via the oscilloscope. The GARC test pin is pin 179 (J7-8 on the GARC test board).
- 2. Send the GARC\_Mode\_Wr command with a data argument of 768 to switch the GARC test pin mux to view the "HitMap test" signal. Send the GARC\_Mode\_Rd command to verify the register data. When trigger commands are sent, the "HitMap test" signal should go active high during times when there is a delayed VETO signal present at the DISC\_IN input. This may be verified via the oscilloscope. The GARC test pin is pin 179 (J7-8 on the GARC test board).
- 3. Send the GARC Reset command to ensure all registers are at the proper initial value.

## 10.0 Test of the Hold Delay Operation

This section tests the proper functioning of the adjustment of the commandable delay function of the trigger to shaping amplifier hold signal. The trigger signal may be monitored on the GARC at pin 180, TRIG\_TST (GARC test board J7-9). The Hold signal may be monitored differentially on the GARC, GAFE\_HOLD\_P at pin 160 and GAFE\_HOLD\_M at pin 161, as shown in the diagram below. GAFE\_HOLD may be measured across R83 on the GAFE simulator board.

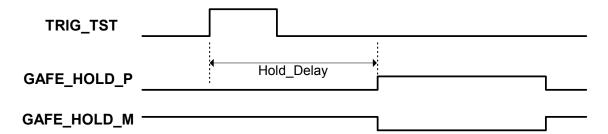

## TRIGGER-TO-HOLD MEASUREMENT

- 1. Measure the DC levels of both GAFE\_HOLD\_P and GAFE\_HOLD\_M and record the values below:
  - a. GAFE HOLD P (DC) : \_\_\_\_\_\_(expected  $\sim 870 \text{ mV})$
  - b. GAFE\_HOLD\_M (DC):\_\_\_\_\_\_(expected ~1600 mV)
- 2. Send the Hold\_Delay\_Wr command with a data argument of decimal 0 and verify with the Hold\_Delay\_Rd command. The Hold\_Delay is variable with arguments of 0 127, representing 50 6400 ns. Hold can be measured at TP4 on the GAFE simulator. The LabView test script **GARC Hold Delay Test.txt** may be used to partially automate this test. Trigger on J7-9 on the GARC test board "TRIG TST".

Hold Delay	Measured	Expected
Command	Hold Delay (ns)	Hold Delay (ns)
0		50
1		100
2		150
3		200
4		250
5		300
6		350
7		400
8		450
9		500
10		550
11		600
12		650
13		700
14		750
15		800
16		850
17		900
18		950
19		1000
20		1050
21		1100
22		1150
23		1200
24		1250
25		1300
26		1350
27		1400


28	1450
29	1500
30	1550
31	1600
32	1650
33	1700
34	1750
35	1800
36	•
37	1850 1900
38	
39	1950
	2000
40	2050
41	2100
42	2150
43	2200
44	2250
45	2300
46	2350
47	2400
48	2450
49	2500
50	2550
51	2600
52	2650
53	2700
54	2750
55	2800
56	2850
57	2900
58	2950
59	3000
60	3050
61	3100
62	
	3150
63 64	3200
	3250
65	3300
66	3350
67	3400
68	3450
69	3500
70	3550
71	3600
72	3650
73	3700
74	3750
75	3800
76	3850
77	3900
78	3950
79	4000
80	4050
81	4100
82	4150
83	4200
0.5	7200

84	4250
85	4300
86	4350
87	4400
88	4450
89	4500
90	4550
91	4600
92	4650
93	4700
94	4750
95	4800
96	4850
97	4900
98	4950
99	5000
100	5050
101	5100
102	5150
103	5200
104	5250
105	5300
106	5350
107	5400
108	5450
109	5500
110	5550
111	5600
112	5650
113	5700
114	5750
115	5800
116	5850
117	5900
118	5950
119	6000
120	6050
121	6100
122	6150
123	6200
124	6250
125	6300
126	6350
127	6400
12/	1 0100

- 3. Send the HitMap\_Width\_Wr command with a data argument of 0. Verify the command using the HitMap\_Width\_Rd readback.
- 4. Send the GARC\_Reset command to restore all register values to their initial state.

## 11.0 Test of the AEM VETO Signal Functionality

This section tests the proper functioning of the commandable functions of the AEM\_VETO signals. This test requires the use of an oscilloscope, a test pulser for input stimulus, and test points to monitor the AEM\_VETOs. The test setup is as shown below.

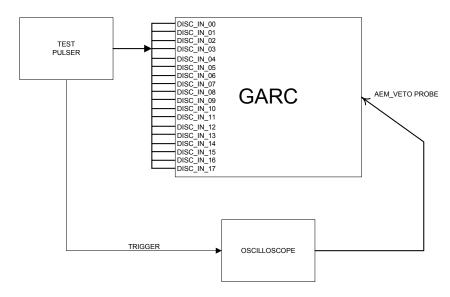


**GARC VETO Test Setup** 

All 18 of the discriminator inputs are tied together and also to the output of the test pulser for this portion of the test. The input test pulse should be approximately 200 ns wide and the rate should be set at approximately 20 kHz. The oscilloscope probe will be monitoring the 18 AEM\_VETO outputs. Between commands, this probe will be moved manually from test point to test point to perform this test. Setting the scope to acquire on the pulse output, this test will be measuring the delay (time from trigger to VETO leading edge) and width (time between leading and trailing edges) of each of the VETO pulses. Since each input has the same signal, the outputs should also be common in delay and width. In timing measurements, the activation signal from the test pulser will be the relative zero.

#### 11.1 Veto Delay Test

 - 1. The discriminator input signal enters the GAFE simulator at J3-3. The NVETO output signal is monitored at J8-2 on the AEM simulator GSE board. For this measurement, it may be convenient to use the oscilloscope in the "persist" mode and then monitor the minimum delay. This test may be automated using the LabView GSE via the scipt **GARC VETO Delay Test.txt**.
- 2. Send the Veto\_Delay\_Wr command with a data argument of 0. Confirm this command via the Veto\_Delay\_Rd command.
- 3. Send the Veto\_Width\_Wr command with a data argument of 0. Confirm this command via the Veto\_Width\_Rd command. Using the oscilloscope, measure the delay from scope trigger to leading edge of VETO for each of the 18 pulses and record the data in the table below. Note that all 18 pulses are designed to have identical timing for this test. The VETO Delay is the time **d** in the diagram below.



**VETO DELAY MEASUREMENT** 

 
4. Repeat the Veto\_Delay\_Wr, Veto\_Delay\_Rd sequence for data argument values of decimal 1 to 31. Record the results in the table below. Note that there is a 50 ns jitter on each of the "expected" numbers.

Veto_Delay Setting	Delay from Scope trigger to Leading Edge (ns)	Expected (ns)
0		200
1		250
2		300
3		350
4		400
5		450
6		500
7		550
8		600
9		650
10		700
11		750
12		800
13		850
14		900
15		950
16		1000
17		1050
18		1100
19		1150
20		1200
21		1250
22		1300
23		1350
24		1400
25		1450
26		1500
27		1550
28		1600
29		1650
30		1700
31		1750

5. Send the Veto\_Delay\_Wr command with a data argument of 0 and a Veto\_Delay\_Rd command to verify this value.

#### 11.2 <u>Veto Width Test</u>

- 1. The setup for this test is the same as the VETO Delay test above. This test may be automated using the LabView GSE via the **GARC VETO Width Test.txt** script.
- 2. Send the Veto\_Width\_Wr command with a data argument of 0. Confirm this command via the Veto\_Width\_Rd command. Using the oscilloscope, measure the width of each of the 18 VETO pulses and record the data in the table below. Note that the width of each of these pulses is expected to be identical for any given commanded setting. The VETO Width is the "w" parameter in the diagram below.



**VETO WIDTH MEASUREMENT** 

3. Repeat the Veto\_Width\_Wr, Veto\_Width\_Rd sequence for data argument values of decimal 1 to 7. Record the results in the table below.

Veto_Width	Measured Width of VETO Pulse (ns)	Expected Width (ns)
0		50
1		100
2		150
3		200
4		250
5		300
6		350
7		400

## 11.3 Veto Enable and Disable Test

This test may be automated when using the LabView GSE via test script **GARC VETO Disable A/B SideTest.txt**. Monitor the counters to verify the Veto signals.

1.	Send the GARC_Mode_Wr command with the value of 768 to enable the "A" and enable the "B'
	side VETOs. Send the GARC Mode Rd command and verify that the return data has a value of
	768. Generate a Trigger event and measure the Veto amplitude swing at R1 and R2 on the AEM
	Simulator for Channel 12 for both A and B.

R1	(expected 400mV)
R2	(expected 400mV)

2. Send the GARC\_Mode\_Wr command with the value of 512 to disable the "A" and enable the "B" side VETOs. Send the GARC\_Mode\_Rd command and verify that the return data has a value of 512. Generate a Trigger event and measure the Veto amplitude swing at R1 and R2 on the AEM Simulator for Channel 12 for both A and B.

R1 -	(expected 400mV)
------	------------------

 
	R2	_(expected 50mV)
3.	side VETOs. Send the GA	Tr command with the value of 256 to enable the "A" and disable the "B" RC_Mode_Rd command and verify that the return data has a value of vent and measure the Veto amplitude swing at R1 and R2 on the AEM for both A and B.
	R1	_(expected 50mV)
	R2	(expected 400mV)
4.	VETOs. Send the GARC_	r command with the value of 0 to disable both the "A" and "B" side Mode_Rd command and verify that the return data has a value of 0. Ind measure the Veto amplitude swing at R1 and R2 on the AEM for both A and B.
	R1	_(expected 50mV)
	R2 -	(expected 50mV)

- 5. Send the GARC\_Mode\_Wr command with the value of 256 to enable the "A" and disable the "B" side VETOs. Send the GARC\_Mode\_Rd command and verify that the return data has a value of 256.
- 6. Send the VETO\_En0\_Rd command and verify that the return data has value 'hFFFF (65535). Send the VETO\_En1\_Rd command and verify that the return data has the value 3
- 7. Send the VETO\_En0\_Wr command with a data argument 'hFFFE (65534). Verify the command with the VETO\_En0\_Rd command. Generate a TCI event for all channels and verify that all VETOs are on with the exception of channel 0.
- 8. Send the VETO\_En0\_Wr command with a data argument 'hFFFD (65533). Verify the command with the VETO\_En0\_Rd command. Generate a TCI event for all channels and verify that all VETOs are on with the exception of channel 1.
- 9. Send the VETO\_En0\_Wr command with a data argument 'hFFFB (65531). Verify the command with the VETO\_En0\_Rd command. Generate a TCI event for all channels and verify that all VETOs are on with the exception of channel 2.
- 10. Send the VETO\_En0\_Wr command with a data argument 'hFFF7 (65527). Verify the command with the VETO\_En0\_Rd command. Generate a TCI event for all channels and verify that all VETOs are on with the exception of channel 3.
- 11. Send the VETO\_En0\_Wr command with a data argument 'hFFEF (65519). Verify the command with the VETO\_En0\_Rd command. Generate a TCI event for all channels and verify that all VETOs are on with the exception of channel 4.
- 12. Send the VETO\_En0\_Wr command with a data argument 'hFFDF (65503). Verify the command with the VETO\_En0\_Rd command. Generate a TCI event for all channels and verify that all VETOs are on with the exception of channel 5.
- 13. Send the VETO\_En0\_Wr command with a data argument 'hFFBF (65471). Verify the command with the VETO\_En0\_Rd command. Generate a TCI event for all channels and verify that all VETOs are on with the exception of channel 6.
- 14. Send the VETO\_En0\_Wr command with a data argument 'hFF7F (65407). Verify the command with the VETO\_En0\_Rd command. Generate a TCI event for all channels and verify that all VETOs are on with the exception of channel 7.
- 15. Send the VETO\_En0\_Wr command with a data argument 'hFEFF (65279). Verify the command with the VETO\_En0\_Rd command. Generate a TCI event for all channels and verify that all VETOs are on with the exception of channel 8.

- 16. Send the VETO\_En0\_Wr command with a data argument 'hFDFF (65023). Verify the command with the VETO\_En0\_Rd command. Generate a TCI event for all channels and verify that all VETOs are on with the exception of channel 9.
- 17. Send the VETO\_En0\_Wr command with a data argument 'hFBFF (64511). Verify the command with the VETO\_En0\_Rd command. Generate a TCI event for all channels and verify that all VETOs are on with the exception of channel 10.
- 18. Send the VETO\_En0\_Wr command with a data argument 'hF7FF (63487). Verify the command with the VETO\_En0\_Rd command. Generate a TCI event for all channels and verify that all VETOs are on with the exception of channel 11.
- 19. Send the VETO\_En0\_Wr command with a data argument 'hEFFF (61439). Verify the command with the VETO\_En0\_Rd command. Generate a TCI event for all channels and verify that all VETOs are on with the exception of channel 12.
- 20. Send the VETO\_En0\_Wr command with a data argument 'hDFFF (57343). Verify the command with the VETO\_En0\_Rd command. Generate a TCI event for all channels and verify that all VETOs are on with the exception of channel 13.
- 21. Send the VETO\_En0\_Wr command with a data argument 'hBFFF (49151). Verify the command with the VETO\_En0\_Rd command. Generate a TCI event for all channels and verify that all VETOs are on with the exception of channel 14.
- 22. Send the VETO\_En0\_Wr command with a data argument 'h7FFF (32767). Verify the command with the VETO\_En0\_Rd command. Generate a TCI event for all channels and verify that all VETOs are on with the exception of channel 15.
- 23. Send the VETO\_En0\_Wr command with a data argument 'hFFFF (65535). Verify the command with the VETO\_En0\_Rd command. Generate a TCI event for all channels and verify that all VETOs are on.
- 24. Send the VETO\_En1\_Wr command with a data argument 2. Verify the command with the VETO\_En1\_Rd command. Generate a TCI event for all channels and verify that all VETOs are on with the exception of channel 16.
- 25. Send the VETO\_En1\_Wr command with a data argument 1. Verify the command with the VETO\_En1\_Rd command. Generate a TCI event for all channels and verify that all VETOs are on with the exception of channel 17.
- 26. Send the GARC\_Mode\_Wr command with the value of 512 to Disable the "A" and enable the "B" side VETOs. Send the GARC\_Mode\_Rd command and verify that the return data has a value of 512. Repeat steps 6 to 25 and verify the B side functionality.
- 27. Send the GARC\_Reset command to restore all register values to their initial state. At the successful conclusion of this section, please document this fact by making an entry in the copy of the Comprehensive Performance Test Record associated with this procedure.

## 11.4 <u>Discriminator Input Minimum Width Test</u>

This test verifies that the VETO processing circuitry meets the specifications detailed in the ICD for the input width. For this test, all discriminator inputs greater than 100 ns in width should be processed, those in the 50 ns to 100 ns range should be sometimes processed (due to jitter), and those inputs less than 50 ns should never be processed. The discriminator signal is input to the GAFE simulator board on J3-3. The VETO signals are monitored after the receivers on the AEM Simulator GSE board.




# DISCRIMINATOR INPUT/OUTPUT FOR MINIMUM WIDTH TEST

- 1. Send the VETO\_Delay\_Wr command with a data argument of 0. Verify the command with the VETO\_Delay\_Rd command. This fixes the delay (**d** in the figure) at 150 ns for this test.
- 2. Send the VETO\_Width\_Wr command with a data argument of 0. Verify the command with the VETO\_Width\_Rd command. This fixes the output width (w2 in the figure) at 50 ns for this test.
- 3. Set the discriminator input on channel 00 to be a pulse of greater than 300 ns in width (w1 in the figure). Verify the ACD NVETO 00 signal out has a pulse output of 50 ns width.
- 4. Steadily decrease the width (w1) of the input pulse down to just greater than 100 ns in width. Verify that no pulses are missed. Adjust the width (w1) of the input pulse to between 50 ns and 100 ns in width. Verify that some pulses are there and some are missed due to the jitter in synchronization of the input signal. Adjust the input pulse width (w1) to just less than 50 ns and verify that all input pulses are rejected (i.e., no pulses output at NVETO).
- 5. Repeat this test for channel 01 and verify.
- 6. Repeat this test for channel 02 and verify.
- 7. Repeat this test for channel 03 and verify.
- 8. Repeat this test for channel 04 and verify.
- 9. Repeat this test for channel 05 and verify.
- 10. Repeat this test for channel 06 and verify.
- 11. Repeat this test for channel 07 and verify.
- 12. Repeat this test for channel 08 and verify.
- 13. Repeat this test for channel 09 and verify.
- 14. Repeat this test for channel 10 and verify.
- 15. Repeat this test for channel 11 and verify.
- 16. Repeat this test for channel 12 and verify.
- 17. Repeat this test for channel 13 and verify.
- 18. Repeat this test for channel 14 and verify.
- 19. Repeat this test for channel 15 and verify.
- 20. Repeat this test for channel 16 and verify.
- 21. Repeat this test for channel 17 and verify.
- 22. Send the GARC Reset command to restore all register values to their initial state.

## 11.5 <u>Discriminator Input Extended Width Test</u>

 This test verifies that the VETO processing circuitry meets the specifications detailed in the ICD for extended input widths. For this test, discriminator inputs greater than




# DISCRIMINATOR INPUT/OUTPUT FOR EXTENDED WIDTH TEST

- 1. Send the Veto\_Delay\_Wr command with a data argument of 0. Verify with the Veto\_Delay\_Rd command.
- 2. Send the Veto\_Width\_Wr command with a data argument of 1. Verify with the Veto\_Width\_Rd command.
- 3. Connect the oscilloscope to monitor the discriminator input and the AEM\_NVETO\_00 output as shown in the diagram above. Start with the width of the input discriminator at approximately 150 ns. Verify that the Veto Delay is 150 ns and the Veto Width is 100 ns.
- 4. Increase the discriminator input from 150 ns to 10  $\mu$ s. Note that the output from the AEM NVETO 00 signal does not change.
- 5. Repeat this test for channel 01 and verify.
- 6. Repeat this test for channel 02 and verify.
- 7. Repeat this test for channel 03 and verify.
- 8. Repeat this test for channel 04 and verify.
- 9. Repeat this test for channel 05 and verify.
- 10. Repeat this test for channel 06 and verify.
- 11. Repeat this test for channel 07 and verify.
- 12. Repeat this test for channel 08 and verify.
- 13. Repeat this test for channel 09 and verify.
- 14. Repeat this test for channel 10 and verify.
- 15. Repeat this test for channel 11 and verify.
- 16. Repeat this test for channel 12 and verify.
- 17. Repeat this test for channel 13 and verify.
- 18. Repeat this test for channel 14 and verify.
- 19. Repeat this test for channel 15 and verify.
- 20. Repeat this test for channel 16 and verify.
- 21. Repeat this test for channel 17 and verify.
- 22. Send the GARC\_Reset command to restore all register values to their initial state.

#### 11.6 Discriminator Input Double Pulse Test

 This test verifies that the VETO processing circuitry meets the specifications detailed in the ICD for extended input widths. For this test, multiple discriminator inputs that cause the VETO outputs to pile-up are verified. The input is on the GAFE simulator board at J3-3 and the outputs are on the AEM Simulator GSE board.




# DISCRIMINATOR INPUT/OUTPUT FOR DOUBLE PULSE TEST

- 1. Send the Veto\_Delay\_Wr command with a data argument of 0. Verify with the Veto\_Delay\_Rd command.
- 2. Send the Veto\_Width\_Wr command with a data argument of 3. Verify with the Veto\_Width\_Rd command.
- 3. Using the test pulser in the double pulse mode, start with the width of the input pulses at 100 ns and the distance, d1-2, at 1 µsec. With two pulses input, there should be two pulses output, each 200 ns in width (wo) at the AEM NVETO 00 output.
- 4. Move the input pulses closer until the two AEM\_NVETO\_00 pulses touch. At this point, they should become one extended pulse. As the input pulses move closer, the tail of the extended pulse should become shorter. As the input pulses are separated again by greater than 200 ns, the AEM NVETO 00 should again show two pulses.
- 5. Repeat this test for channel 01 and verify.
- 6. Repeat this test for channel 02 and verify.
- 7. Repeat this test for channel 03 and verify.
- 8. Repeat this test for channel 04 and verify.
- 9. Repeat this test for channel 05 and verify.
- 10. Repeat this test for channel 06 and verify.
- 11. Repeat this test for channel 07 and verify.
- 12. Repeat this test for channel 08 and verify.
- 13. Repeat this test for channel 09 and verify.
- 14. Repeat this test for channel 10 and verify.
- 15. Repeat this test for channel 11 and verify.
- 16. Repeat this test for channel 12 and verify.
- 17. Repeat this test for channel 13 and verify.
- 18. Repeat this test for channel 14 and verify.
- 19. Repeat this test for channel 15 and verify.
- 20. Repeat this test for channel 16 and verify.

- 21. Repeat this test for channel 17 and verify.
- 22. Send the GARC Reset command to restore all register values to their initial state.

### 12.0 Test of the HitMap Functionality

 This section tests the proper functioning of the commandable functions of the HitMap test point. This test requires the use of an oscilloscope, a test pulser for input stimulus, and test points to monitor the AEM\_VETOs. The test setup is identical to the VETO test setup shown above. Only channel 00 is available on the test pin for HitMap verification. The diagram below details the measurement points to use with the digitizing oscilloscope. The discriminator input signal should be input at the GAFE simulator test connector, J3-3, and should be  $\sim 100$  nsec in width. The HitMap output is at J7-8 on the GARC test board.



HITMAP DELAY & WIDTH MEASUREMENT

#### 12.1 HitMap Width Test

This test may be automated using the LabView GSE via the **GARC HitMap Width Test.txt** script.

- 1. Send the HitMap\_Deadtime\_Wr command with a data argument of 0. Verify this command with the HitMap\_Deadtime\_Rd command.
- 2. Send the GARC\_Mode\_Wr command with a data argument of decimal 768 to ensure the test pin multiplexer is set to the HitMap Test output. Place an oscilloscope probe on this test point.
- 3. Send the HitMap\_Width\_Wr command with a data argument of 0. Verify the command using the HitMap\_Width\_Rd readback.
- 4. Send the HitMap\_Delay\_Wr command with a data argument of 0. Verify the command using the HitMap\_Delay\_Rd readback.
- 5. Send the HitMap\_Deadtime\_Wr command with a data argument of 0. Verify the command using the HitMap\_Deadtime\_Rd readback.
- 6. Set up the test pulser to stimulate the discriminator input for channel 0. Monitor the HitMap Test output with the oscilloscope triggered from the test pulser. Using the HitMap\_Width\_Wr command with data arguments of 0-15, verify the HitMap Width varies as expected and record the data in the table below.

HitMap Width	Measured Width	<b>Expected Width</b>
Command	(ns)	(ns)
0		150
1		200
2		250
3		300
4		350
5		400

6	450
7	500
8	550
9	600
10	650
11	700
12	750
13	800
14	850
15	900

7. Send the HitMap\_Width\_Wr command with a data argument of 0 to reset the HitMap Width. Verify the command with the HitMap\_Width\_Rd command.

## 12.2 <u>HitMap Delay Test</u>

This setup is the same as the previous section with the exception that the oscilloscope is in persistence mode and the trigger is on the discriminator input. The minimum delay is the number to be recorded. This test may be automated using the LabView GSE via the **GARC HitMap Delay Test.txt** script.

1. Using the HitMap\_Delay\_Wr command with data arguments of 0 - 31, verify the HitMap Delay varies as expected and record the data in the table below.

HitMap Delay	Measured Delay	<b>Expected Delay</b>
Command	(ns)	(ns)
0		900
1		950
2		1000
3		1050
4		1100
5		1150
6		1200
7		1250
8		1300
9		1350
10		1400
11		1450
12		1500
13		1550
14		1600
15		1650
16		1700
17		1750
18		1800
19		1850
20		1900
21		1950
22		2000
23		2050

 
24	2100
25	2150
26	2200
27	2250
28	2300
29	2350
30	2400
31	2450

2. Send the HitMap\_Delay\_Wr command with a data argument of 0 to reset the HitMap Delay. Verify the command with the HitMap Delay Rd command.

## 12.3 <u>HitMap Deadtime Stretch Test</u>

This test may be automated using the LabView GSE via the GARC HitMap Deadtime Test.txt script.

This test will monitor the function of the HitMap\_Deadtime adjustment. This Deadtime register adds a time (0 to 350 ns) to the end of the HitMap pulse, starting at the end of the HitMap Width calculation. The diagram below illustrates the position of the added time window.



#### HITMAP DEADTIME TEST

 
- 1. Send the HitMap\_Deadtime\_Wr command with a data argument of 0. Verify this command with the HitMap\_Deadtime\_Rd command.
- 2. Using the HitMap\_Deadtime\_Wr command with data arguments of 0-7, verify the HitMap Deadtime extends the trailing edge of the HitMap test pulse as expected and record the data in the table below.

HitMap Deadtime	Measured Deadtime	<b>Expected Deadtime</b>
Command	Pulse Extension - (ns)	Pulse Extension -(ns)
0		0
1		50
2		100
3		150
4		200
5		250
6		300
7		350

3. Send the GARC Reset command to restore all register values to their initial state.

#### 12.4 HitMap Minimum Width Test

This test characterizes the performance of the HitMap functionality for a minimum width discriminator input.




#### HITMAP MINIMUM WIDTH TEST

- 1. Send the HitMap\_Delay\_Wr command with a data argument of 0. Verify the command with the HitMap\_Delay\_Rd command. This fixes the delay (**d** in the figure) at 850 ns for this test.
- 2. Send the HitMap\_Width\_Wr command with a data argument of 0. Verify the command with the HitMap\_Width\_Rd command. This fixes the output width (W<sub>HM</sub> in the figure) at 150 ns for this test.
- 3. Starting with the discriminator input width at 200 ns, note that the HitMap output is shown as above. Decrease the width of the discriminator input until the HitMap output starts to disappear. Verify that the HitMap Test is stable for all discriminator inputs greater than 50 ns.

#### 12.5 HitMap Extended Pulse Test


This test characterizes the performance of the HitMap circuitry with an extended discriminator input pulse.

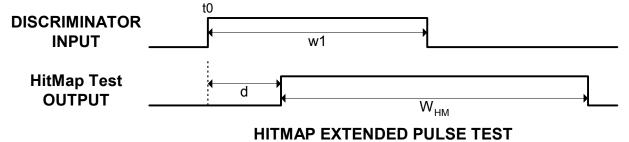

- 1. Send the HitMap\_Delay\_Wr command with a data argument of 0. Verify the command with the HitMap\_Delay\_Rd command. This fixes the delay (**d** in the figure) at 850 ns for this test.
- 2. Send the HitMap\_Width\_Wr command with a data argument of 0. Verify the command with the HitMap Width Rd command. This fixes the output width (W<sub>HM</sub> in the figure) at 150 ns for this test.
- 3. Starting with the discriminator input width at about 500 ns, increase the discriminator width up to approximately 10 µsec. Verify that the HitMap\_Width increases with the discriminator input width.

#### 12.6 HitMap Double Pulse Test

 This test characterizes the performance of the HitMap circuitry with a double pulse at the discriminator input. The discriminator input with should be set to be approximately 100 ns.




#### HITMAP DOUBLE PULSE TEST

- 1. Send the HitMap\_Delay\_Wr command with a data argument of 0. Verify the command with the HitMap\_Delay\_Rd command. This fixes the delay (**d** in the figure) at 900 ns for this test.
- 2. Send the HitMap\_Width\_Wr command with a data argument of 0. Verify the command with the HitMap\_Width\_Rd command. This fixes the output width (**W**<sub>HM</sub> in the figure) at 150 ns for this test.
- 3. Send the HitMap\_Deadtime\_Wr command with a data argument of 0. Verify the command with the HitMap\_Deadtime\_Rd command.
- 4. Starting with the discriminator input pulses at about 100 ns in width and 10 μs apart, note that there are two HitMap output pulses each 150 ns wide.
- 5. Decrease the distance between the discriminator input pulses until the two HitMap output pulses merge to one extended pulse. Verify that this merge time is approximately 150+900+50 = 1100 ns. Verify that the length of the pulse is extended 950 ns from the leading edge of the second pulse.

Measured Merge Time - \_\_\_\_\_ (Expected Value 1100ns)

#### 13.0 Strobe Test

This section tests the proper functioning of the commandable strobe pulse to the GAFEs from the GARC. This signal is used as a level command to the GAFE(s) to indicate the timing of the test charge injection to the amplifier front end. Using the oscilloscope monitoring Live on GARC pin 179, GAFE\_STROBEP on GARC pin 163 and GAFE\_STROBEM on GARC pin 164, perform the following (as shown in the diagram below):

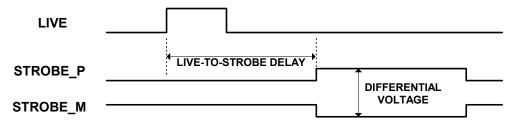


#### STROBE COMMAND TEST

This test will require the LabView GSE to be running in the Internal Pulser mode. The GARC Live signal may be monitored on J7-8 on the GARC test board. STROBE\_P is at J4-10 and STROBE\_M is at J4-9 on the GARC test board.

1.	Send the	e ADC_TACQ_Wr command with a variable of 0 nd.	. Verify command with a ADC_TACQ_Rd
2.	Measu	e the DC levels of both STROBE_P and STROBE	E_M and record the values below
	a.	STROBE_P (DC):	(expected $\sim 700 \text{ mV}$ )
	b.	STROBE_M (DC):	(expected ~1600 mV)
3.		e GARC_Mode_Wr command with data argumen e signal.	t 1792 to switch the test pin multiplexer to
4.		scope to acquire on the posedge of Live. Send the scommand so the data argument is 0).	e GARC_Cal_Strobe command (this is a
5.	channe	the STROBE command has executed by noting the ls. It is expected that the voltage amplitude of each that the pulse duration is approximately 10 µsec.	h side of the differential is greater than 50
		STROBEP to STROBEM differential voltage:	(expected 900 mV)
		Live-to-STROBE delay:	(expected ~ 150 ns)
		STROBE pulse duration (µsec):	(expected 12.5 μsec)
6. <b>14.0</b>		e GARC_Reset command to restore all register varies of the ADC Control Signals	llues to their initial state.
1.	Connection Connection	et the probe on channel 1 to NADC_CS (J4-1). Set	t the scope to trigger on the negedge of this
2.	_	et the probe on channel 2 to ADC_CLK (J4-2).	
3.	Connec	et the probe on channel 3 to PHAD00 (J4-15).	
4.		e TRIG_ZS command to initiate an analog-to-digital following waveform should be displayed. Verify	
		Clock rate measured:MHz	
5.	The tin	ne t1 represents the total ADC TACQ (ADC acquis	sition time).
NADC_C	:s	<del></del>	
ADC_CL	к		
PHAD		D11 D10 D09 D08 D07	D06 D05 D04 D03 D02 D01 D00
		MAX145 ADC CONVER	SION CYCLE
6.	Measur	e the duration of the NADC_CS:	(expected ~ 10.6 μsec)

## 15.0 ADC TACQ Test

1. The next parameter to be measured will be the ADC time to acquisition (essentially the settling time allowed for the analog signal). This is a command with a 6 bit data argument. This alters the time between the ADC chip select transitioning active low and the start of the ADC clock. The register is set with the ADC\_TACQ\_Wr command and verified with the ADC\_TACQ\_Rd command. For each value of ADC\_TACQ in the table below, record the time from the falling edge of the ADC\_CS\_N and the rising edge of the first ADC clock. Nominally, with an ADC\_TACQ register setting of 0, there will be a CS → PHA clock delay time of 2850 ns. There is the potential for a small amount of synchronization jitter (~few clocks) within the state machine on this parameter.

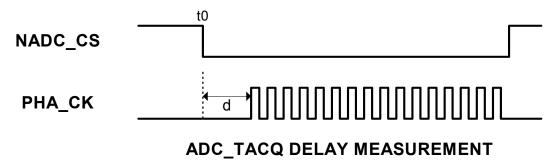

NADC\_CS is at J4-1 on the GARC test board. PHA\_CK is at J4-2.

This test may be automated using the LabView GSE script GARC ADC TACQ Test.txt.

For each ACD\_TACQ step, measure the delay, **d**, as shown in the diagram above. For the table below, the important parameter is the even 50 ns spacing on each step from the original zero point.

ADC TACQ	Measured Time	Expected Time
Register	CS → PHA Clock (ns)	CS → PHA Clock (ns)
0		2850
1		2900
2		2950
3		3000
4		3050
5		3100
6		3150
7		3200
8		3250
9		3300
10		3350
11		3400
12		3450
13		3500
14		3550
15		3600
16		3650
17		3700
18		3750
19		3800
20		3850
21		3900
22		3950
23		4000

·	·
24	4050
25	4100
26	4150
27	4200
28	4250
29	4300
30	4350
31	4400
32	4450
33	4500
34	4550
35	4600
36	4650
37	4700
38	4750
39	4800
40	4850
41	4900
42	4950
43	5000
44	5050
45	5100
46	5150
47	5200
48	5250
49	5300
50	5350
51	5400
52	5450
53	5500
54	5550
55	5600
56	5650
57	5700
58	5750
59	5800
60	5850
61	5900
62	5950
63	6000

2. Send the GARC Reset command to restore all register values to their initial state.

## 16.0 Test of the GARC LVDS Circuitry Driver Currents

This section tests the proper functioning of the GARC LVDS Driver circuitry. It is required that all LVDS drivers be terminated at the receiver with a 100 ohm resistor. The ACD-to-AEM nominal drive current is 3.5 mA across the 100 ohms for a voltage differential of 350 mV.


There are 6 LVDS receiver input pairs to the GARC:

- a) ACD CLK A, ACD CLK B
- b) ACD CMD A, ACD CMD B
- c) ACD\_RESET\_A, ACD\_RESET\_B

There are 40 LVDS driver output pairs from the GARC:

- d) ACD NSDATA A, ACD NSDATA B
- e) ACD NVETO nnA, ACD NVETO nnB (where nn is 00 17)
- f) ACD CNO A, ACD CNO B

The "A" side interface will be examined first. Verify that an AEM (or AEM simulator) is connected to the GARC "A" side interface. Using a digitizing oscilloscope, measure the DC baseline and switching differential voltage on each of the driver/receiver pairs. Two scope probes may be used, one on each side of the differential receiver inputs. The DC level and switching voltages may be measured as diagrammed below. The measurement will be made with the Drivers enabled and with them disabled.

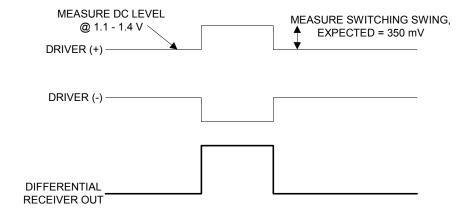

Record the information for each pin on the Primary side interface in the table below. Please document the data from the following steps in the copy of the Test Record associated with this procedure.

GARC Signal	Signal Location	DC Level (V) Enabled	DC Level (V) Disabled
ACD_NVETO_12B	R1		
ACD_NVETO_12A	R2		
ACD_NVETO_11B	R3		
ACD_NVETO_11A	R4		
ACD_NVETO_10B	R5		
ACD_NVETO_10A	R6		
ACD_NVETO_09B	R7		
ACD_NVETO_09A	R8		
ACD_NVETO_08B	R9		
ACD_NVETO_08A	R10		
ACD_NVETO_07B	R11		
ACD_NVETO_07A	R12		
ACD_NVETO_06B	R13		
ACD_NVETO_06A	R14		
ACD_NVETO_05B	R15		
ACD_NVETO_05A	R16		
ACD_NVETO_04B	R17		
ACD_NVETO_04A	R18		
ACD_NVETO_03B	R19		
ACD_NVETO_03A	R20		
ACD_NVETO_02B	R21		
ACD_NVETO_02A	R22	_	_
ACD_NVETO_01B	R23	_	_
ACD_NVETO_01A	R24		

ACD_NVETO_00B	R25	
ACD_NVETO_00A	R26	
ACD_CNO_B	R27	
ACD_CNO_A	R28	
ACD_NSDATA_B	R29	
ACD_NSDATA_A	R30	
ACD_RESET_B	R41	
ACD_CMD_B	R42	
ACD_CMD_A	R43	
ACD_CLK_A	R44	
ACD_NVETO_13B	R31	
ACD_NVETO_13A	R32	
ACD_NVETO_14B	R33	
ACD_NVETO_14A	R34	
ACD_NVETO_15B	R35	
ACD_NVETO_15A	R36	
ACD_NVETO_16B	R37	
ACD_NVETO_16A	R38	
ACD_NVETO_17B	R39	
ACD_NVETO_17A	R40	

Measure the GAFE to GARC LVDS signals.

GARC Signal	Test Board Pin	DC Level (V)	Switch Swing (V)
IRTN_00	J4-33	• •	
DISC_00	J4-34		
CHID_00	J4-35		
IRTN_01	J4-36		
DISC_01	J4-37		
CHID_01	J4-38		
IRTN_02	J4-39		
DISC_02	J4-40		
CHID_02	J4-41		
IRTN_03	J4-42		
DISC_03	J4-43		
CHID_03	J4-44		
IRTN_04	J4-45		
DISC_04	J4-46		
CHID_04	J4-47		
IRTN_05	J4-48		
DISC_05	J4-49		
CHID_05	J4-50		
IRTN_06	J4-51		
DISC_06	J4-52		
CHID_06	J4-53		
IRTN_07	J4-54		
DISC_07	J4-55		
CHID_07	J4-56		
IRTN_08	J4-57		
DISC_08	J4-58		
CHID_08	J4-59		
IRTN_09	J4-60		
DISC_09	J4-61		
CHID_09	J4-62		

IRTN_10	J4-63	
DISC_10	J4-64	
CHID_10	J4-65	
IRTN_11	J4-66	
DISC_11	J4-67	
CHID_11	J4-68	
IRTN_12	J4-69	
DISC_12	J4-70	
CHID_12	J4-71	
IRTN_13	J4-72	
DISC_13	J4-73	
CHID_13	J4-74	
IRTN_14	J4-75	
DISC_14	J4-76	
CHID_14	J4-77	
IRTN_15	J4-78	
DISC_15	J4-79	
CHID_15	J4-80	
IRTN_16	J4-81	
DISC_16	J4-82	
CHID_16	J4-83	
IRTN_17	J4-84	
DISC_17	J4-85	
CHID_17	J4-86	

This completes the testing of the GARC LVDS driver circuitry.

# 17.0 Multiple System Clock Speed Test and Power Supply Rail Tests – 3.0V to 3.6V

The function of this test is to verify operation of the GARC circuitry over the range of allowable clock frequencies and Power Supply Rail limits. The majority of this test has been performed at the nominal 20 MHz clock and has therefore verified the nominal frequency. This portion of the test will verify operation at the low and high limit frequencies and at min and max rail voltages. This will be verified by performing the register test. This may be done via automated script.

- 1) Set the clock frequency to the 22 MHz high limit.
- 2) Run the register test from section 6
- 3) Verify that all parameters are essentially unchanged

-	Register Test Verified - Set power supply to +3.6V high limit. Record the +3.6V Current
	+3.6V current
	Run the register test from section 6 Verify that all parameters are essentially unchanged

Register Test Verified -

- 8) Set power supply to +3.0V high limit.
- 9) Record the +3.0V Current

+3.0V current
<ul><li>10) Run the register test from section 6</li><li>11) Verify that all parameters are essentially unchanged</li></ul>
Register Test Verified
Set the clock frequency to the 14 MHz low limit and reset the power supply to +3.3V. 12) Run the register test from section 6 13) Verify that all parameters are essentially unchanged
Register Test Verified
Register Test Verified
<ul> <li>18) Set power supply to +3.0V high limit.</li> <li>19) Run the register test from section 6</li> <li>20) Verify that all parameters are essentially unchanged</li> </ul>
Register Test Verified

## **Appendix 1: GARC Documentation**

A more complete set of documentation (such as the Verilog, EDIF, layout, and wirebonding diagram) is available on the LHEA ACD electronics web page at:

http://lhea-glast.gsfc.nasa.gov/acd/electronics/

## **Appendix 2: GARC Configuration Command Format**

The GARC logic core responds only to properly structured commands. There are two possible command types – Trigger Commands and Configuration Commands. Trigger commands initiate an Event Data cycle, causing a GAFE Hold, an analog-to-digital conversion, and the return of an event data packet. Configuration commands are used to either read or write GARC or GAFE registers.

The format for Trigger Commands is detailed in the table below.

Bit(s)	Bit Description	Value
3	Start Bit	1
2:1	Trigger Type Bits	10 for ZS Enabled Trigger
		01 for Send All PHA Trigger
0	Parity Bit	Odd parity bit over previous two bits

Therefore, a 1100 is a ZS Enabled Trigger command and a 1010 is a Send All PHA Trigger command.

This format for GARC Configuration Commands is detailed in the table below.

Field	# bits	Function	
Start	1	1 for start	
CMD Type	2	00 for command	
CMD Type Parity	1	Odd Parity over previous 2 bits (without Start bit)	
GAFE/GARC	1	0 for GARC	
Select		1 for GAFE	
GAFE/GARC	5	GAFE: Select which GAFE, 0x1F for all GAFE	
Address		GARC: Select which function block	
Read/Write	1	0 for write, 1 for read	
Data/Dataless	1	0 for dataless, 1 for data, always 1 for ACD	
register/function number	4	Which register/function in the function block	
CMD Parity	1	Odd parity bit over previous 15 bits	
Data	16	Data Field	
Data Parity	1	Odd parity bit over previous 16 bits	

## **Appendix 3: GARC Event Data Format:**

The GARC core returns an event data packet when a valid trigger command is received. The event data format is detailed in the table below.

Field #		<u>Function</u>	
Start Bit	1	1 for start	
Hit Map Bits	18	Bits 17-0 for channels 0-17, bit set if hit in channel	
Zero Suppression Bits	18	Bits 17-0 for channels 0-17, bit set if PHA above threshold	
CMD/Data ERROR	1	Error in command parity detected	
Header Parity	1	Odd parity bit over previous 37 bits	
PHA Words (quantity 0-18) Order: Channel 0 to channel 17	15	Bit 14: 1 if another PHA word follows this one, 0 if this is last one Bit 13: 1 for high range, 0 for low range Bits 12-1: the PHA value, 0 to 4095 Bit 0: Odd parity over last 14 bits	

## **Appendix 4: GARC Configuration Data Readback Format:**

The GARC core returns an register configuration data packet when a valid configuration readback command is received. The configuration readback data format is detailed in the table below.

<u>Field</u>	# bits	<b>Function</b>	
Start	1	1 for start	
GAFE/GARC Select	1	Copy of write command field (0 for GARC, 1 for GAFE)	
GAFE/GARC Address	5	Copy of write command field (Select which GAFE)	
Read/Write	1	1 for read	
Data/Dataless	1	always 1	
Register/function number	4	Copy of write command field (which register/function in the	
		function block)	
CMD Parity	1	Odd parity bit over previous 12 bits	
Data	16	Data, MSB first	
CMD/DATA ERROR	1	Error in parity detected	
Parity	1	Odd parity bit over previous 17 bits	

**Appendix 5: GARC Pin List** 

Tanner	MOSIS	GARC	GARC
IO Cell	Bond Pad	Package Pin	Signal Name
	Name	Number	
PADGnd	L1	1	DGND
PADAREF	L2	2	ACD_CLK_AP
PADAREF	L3	3	ACD_CLK_AM
PADAREF	L4	4	ACD_CLK_BP
PADAREF	L5	5	ACD_CLK_BM
PADAREF	L6	6	ACD_NSCMD_AP
PADAREF	L7	7	ACD_NSCMD_AM
PADAREF	K8	8	ACD_NSCMD_BP
PADAREF	L9	9	ACD_NSCMD_BM
PADAREF	L10	10	ACD_NRST_AP
PADAREF	L11	11	ACD_NRST_AM
PADAREF	L12	12	ACD_NRST_BP

PADAREF	L13	13	ACD_NRST_BM
PADAREF	L14	14	ACD_NSDATA_AP
PADAREF	L15	15	ACD_NSDATA_AM
PADAREF	L16	16	ACD_NSDATA_BP
PADAREF	L17	17	ACD_NSDATA_BM
PADAREF	L18	18	ACD_NCNO_AP
PADAREF	L19	19	ACD_NCNO_AM
PADAREF	L20	20	ACD NCNO BP
PADAREF	L21	21	ACD NCNO BM
PADAREF	L22	22	ACD NVETO 00AP
PADAREF	L23	23	ACD NVETO 00AM
PADVdd	L24	24	DVDD
PADAREF	L25	25	ACD NVETO 00BP
PADAREF	L26	26	ACD NVETO 00BM
PADGnd	L27	27	DGND
PADAREF	L28	28	ACD NVETO 01AP
PADAREF	L29	29	ACD NVETO 01AM
PADAREF	L30	30	ACD NVETO 01BP
PADAREF	L31	31	ACD NVETO 01BM
PADAREF	L32	32	ACD NVETO 02AP
PADAREF	L33	33	ACD NVETO 02AM
PADAREF	L34	34	ACD NVETO 02BP
PADAREF	L35	35	ACD NVETO 02BM
PADAREF	L36	36	ACD NVETO 03AP
PADAREF	L37	37	ACD NVETO 03AM
PADAREF	L38	38	ACD NVETO 03BP
PADAREF	L39	39	ACD NVETO 03BM
PADAREF	L40	40	ACD NVETO 04AP
PADAREF	L40	41	ACD NVETO 04AF
PADAREF	L41 L42	42	ACD_NVETO_04AM  ACD_NVETO_04BP
PADAREF	L42 L43	43	ACD NVETO_04BF
PADAREF	L43 L44	44	ACD NVETO 05AP
PADAREF	L44 L45	45	ACD NVETO 05AM
PADAREF	L43	46	ACD NVETO 05BP
PADAREF	L40 L47	47	ACD_NVETO_03BP  ACD_NVETO_03BP
PADAREF	L47 L48	48	ACD NVETO 06AP
PADAREF	L49	49	ACD_NVETO_00AF  ACD_NVETO_06AM
PADAREF	L50	50	ACD_NVETO_06AM  ACD_NVETO_06BP
PADAREF	L50 L51	51	ACD_NVETO_06BM
PADAREF	L51 L52	52	DVDD
PADGnd	B1	53	DGND
		54	
PADAREF	B2 B3	55	ACD_NVETO_07AP
PADAREF PADAREF	B4	56	ACD_NVETO_07AM
			ACD_NVETO_07BP
PADAREF PADAREF	B5 B6	57 59	ACD NVETO 09AB
		58	ACD_NVETO_08AP
PADAREF	B7	59	ACD_NVETO_08AM
PADAREF	B8	60	ACD_NVETO_08BP
PADAREF	B9	61	ACD_NVETO_08BM
PADAREF	B10	62	ACD_NVETO_09AP
PADAREF	B11	63	ACD_NVETO_09AM
PADAREF	B12	64	ACD_NVETO_09BP
PADAREF	B13	65	ACD_NVETO_09BM
PADAREF	B14	66	ACD_NVETO_10AP
PADAREF	B15	67	ACD_NVETO_10AM
PADAREF	B16	68	ACD_NVETO_10BP
PADAREF	B17	69	ACD_NVETO_10BM
PADAREF	B18	70	ACD_NVETO_11AP
PADAREF	B19	71	ACD_NVETO_11AM
PADAREF	B20	72	ACD_NVETO_11BP
PADAREF	B21	73	ACD_NVETO_11BM

PADAREF	B22	74	ACD NVETO 12AP
PADAREF	B23	75	ACD NVETO 12AM
PADAREF	B24	76	ACD NVETO 12BP
PADAREF	B25	77	ACD NVETO 12BM
PADVdd	B26	78	DVDD
PADAREF	B27	79	CHID_17
PADGnd	B28	80	DGND
PADAREF	B29	81	DISC_17
PADAREF	B30	82	IRTN 17
PADAREF	B31	83	CHID 16
PADAREF	B32	84	DISC 16
PADAREF	B33	85	IRTN 16
PADAREF	B34	86	CHID 15
PADAREF	B35	87	DISC_15
PADAREF	B36	88	IRTN_15
PADAREF	B37	89	CHID_14
PADAREF	B38	90	DISC_14
PADAREF	B39	91	IRTN_14
PADAREF	B40	92	CHID 13
PADAREF	B41	93	DISC 13
PADAREF	B42	94	IRTN 13
PADAREF	B43	95	CHID 12
PADAREF	B44	96	DISC_12
PADAREF	B45	97	IRTN_12
PADAREF	B46	98	CHID_11
PADAREF	B47	99	DISC_11
PADAREF	B48	100	IRTN_11
PADAREF	B49	101	CHID 10
PADAREF	B50	102	DISC 10
PADAREF	B51	103	IRTN 10
PADAREF	B52	104	HLD WOR BIAS
PADAREF	R52	105	CHID 09
PADAREF	R51	106	DISC 09
PADAREF	R50	107	IRTN 09
PADAREF	R49	108	CHID 08
			_
PADAREF	R48	109	DISC_08
PADAREF	R47	110	IRTN_08
PADAREF	R46	111	CHID_07
PADAREF	R45	112	DISC_07
PADAREF	R44	113	IRTN_07
PADAREF	R43	114	CHID_06
PADAREF	R42	115	DISC_06
PADAREF	R41	116	IRTN_06
PADAREF	R40	117	CHID 05
PADAREF	R39	118	DISC 05
PADAREF	R38	119	IRTN 05
PADAREF	R37	120	CHID 04
PADAREF	R36	121	DISC 04
PADAREF	R35	122	IRTN 04
PADAREF	R34	123	CHID 03
PADAREF	R33	124	DISC_03
PADAREF	R32	125	IRTN_03
PADAREF	R31	126	CHID_02
PADAREF	R30	127	DISC_02
PADAREF	R29	128	IRTN_02
PADAREF	R28	129	CHID_01
PADAREF	R27	130	DISC 01
PADAREF	R26	131	IRTN 01
PADVdd	R25	132	DVDD
PADAREF	R24	133	CHID 00
PADAREF	R23	134	DISC 00
IADAKEE	K23	134	DISC_00

PADAREF	R22	135	IRTN_00
PADGnd	R21	136	DGND
PADInC	R20	137	PHAD 17
PADInC	R19	138	PHAD 16
PADInC	R18	139	PHAD 15
PADInC	R17	140	PHAD_14
PADInC	R16	141	PHAD_13
PADInC	R15	142	PHAD_12
PADInC	R14	143	PHAD 11
PADInC	R13	144	PHAD 10
PADInC	R12	145	PHAD 09
PADInC	R11	146	PHAD 08
		147	
PADInC	R10		PHAD_07
PADInC	R9	148	PHAD_06
PADInC	R8	149	PHAD_05
PADInC	R7	150	PHAD_04
PADInC	R6	151	PHAD 03
PADInC	R5	152	PHAD 02
PADInC	R4	153	PHAD 01
PADInC	R3	154	PHAD 00
			_
PADVdd	R2	155	DVDD
PADAREF	R1	156	BIAS_RCVR
PADGnd	T52	157	DGND
PADAREF	T51	158	IRTN HL DISC
PADAREF	T50	159	OR HL DISC
PADAREF	T49	160	BIAS DRV H
PADAREF	T48		GAFE HOLDP
		161	_
PADAREF	T47	162	GAFE_HOLDM
PADAREF	T46	163	GAFE_STROBEP
PADAREF	T45	164	GAFE_STROBEM
PADAREF	T44	165	GAFE_DATP
PADAREF	T43	166	GAFE DATM
PADAREF	T42	167	GAFE CLKP
PADAREF	T41	168	GAFE CLKM
PADAREF	T40	169	BIAS DRV L
PADInC	T39	170	GAFE_RET_DATA
PadOut	T38	171	GAFE_RST
PADOut	T37	172	ADC_CLK
PADOut	T36	173	NADC_CS
PADOut	T35	174	DAC CLK
PADOut	T34	175	DAC_DATA
PADInC	T33	176	DAC READBACK
PADOut	T32	177	NDAC CS
			NDAC_CS
PADOut	T31	178	
PADOut	T30	179	HITMAP_TEST
PADOut	T29	180	TRIG_TST
PADInC	T28	181	FREE_ID
PADInC	T27	182	PWR ON RST
PADOut	T26	183	VETO ENA TST
PADAREF	T25	184	LVDS PRESETADJ
PADOut	T24	185	HV ENABLE 1
PADOut	T23	186	HV_ENABLE_2
PADGnd	T22	187	DGND
PADAREF	T21	188	ACD_NVETO_17AP
PADAREF	T20	189	ACD_NVETO_17AM
PADAREF	T19	190	ACD NVETO 17BP
PADAREF	T18	191	ACD NVETO 17BM
PADAREF	T17	192	ACD NVETO 16AP
	T16	192	
PADAREF			
PADAREF	T15	194	ACD_NVETO_16BP
PADAREF	T14	195	ACD_NVETO_16BM

PADAREF	T13	196	ACD_NVETO_15AP
PADAREF	T12	197	ACD_NVETO_15AM
PADAREF	T11	198	ACD_NVETO_15BP
PADAREF	T10	199	ACD_NVETO_15BM
PADAREF	Т9	200	ACD_NVETO_14AP
PADAREF	T8	201	ACD_NVETO_14AM
PADAREF	T7	202	ACD_NVETO_14BP
PADAREF	T6	203	ACD_NVETO_14BM
PADAREF	T5	204	ACD_NVETO_13AP
PADAREF	T4	205	ACD_NVETO_13AM
PADAREF	T3	206	ACD_NVETO_13BP
PADAREF	T2	207	ACD_NVETO_13BM
PADVdd	T1	208	DVDD

# **Appendix 6: Test Results Record**

All measurements and test results will be recorded in this Test Results Record. A copy of the entire this entire document is not required each time the test is performed. The appendix will serve as the official record each time this test is performed.

2.0	QA Signoff				
(NOTE	y Assurance approval to proceed with the test E: If QA gives verbal approval to proceed but is not approval.)	in attendance for the test, record the date and the			
BIAS I	Resistor Verified on the GARC Test Board				
2.1	GARC Identification				
The tes	st conductor for this test is:				
The ide	The identification/Serial Number listed on the GARC ASIC is:				
The ser	The serial number of the AEM Simulator board is:				
The ser	rial number of the GARC Test board is:				
The ser	rial number of the GAFE Simulator board is:				

# 2.2 Test Equipment Utilized

Instrument Type	Manufacturer & Model Number	NASA ID Number	Calibration Due Date
Power Supply +3.3V			
Multimeter 1			
Multimeter 2			
Pulse Generator			
Oscilloscope			
AEM GSE Board Serial Number			
GAFE Simulator Board Serial Number			

# 4.1 Measurement of the GARC Bias Resistors and Voltages

+3.3V Current - \_\_\_\_\_\_ (\_\_\_\_± 5mA)

GARC Bias Signal	GARC Pin	<b>Resistor Test Point</b>	<b>Expected Voltage</b>	Measured Voltage
HLD_WOR_BIAS	104	R19	1.64V	
BIAS_RCVR	156	R16	1.10V	
BIAS_DRV_H	160	R15	1.53V	
BIAS_DRV_L	169	R13	1.75V	
LVDS_PRESET_ADJ	184	R20	1.52V	

# **4.2** GARC Registers Initial Reset Test

Turn On reset verified	
Board Serial Number verified	
Reset Command verified -	

# 5.1 FREE Power Measurement at the Nominal Power Supply Voltage

GARC Mode	GARC_Mode_Wr	+3.3V Current	+3.3V Current
	Data Argument	Measured (mA)	Expected (mA)
LVDS "A" Drivers Enabled			
LVDS "B" Drivers Enabled	768		$185 \pm 5 \text{mA}$
LVDS "A" Drivers Enabled			
LVDS "B" Drivers Disabled	256		$135 \pm 5 \text{mA}$
LVDS "A" Drivers Disabled			
LVDS "B" Drivers Enabled	512		$135 \pm 5$ mA
LVDS "A" Drivers Disabled			
LVDS "B" Drivers Disabled	0		$80 \pm 5 \text{mA}$

# **5.2** FREE Power Measurement at the Minimum Power Supply Voltage

GARC Mode	GARC_Mode_Wr	+3.0V Current	+3.0V Current
	Data Argument	Measured (mA)	Expected (mA)
LVDS "A" Drivers Enabled			
LVDS "B" Drivers Enabled	768		$160 \pm 5 \text{mA}$
LVDS "A" Drivers Enabled			
LVDS "B" Drivers Disabled	256		$115 \pm 5 \text{mA}$
LVDS "A" Drivers Disabled			
LVDS "B" Drivers Enabled	512		$115 \pm 5$ mA
LVDS "A" Drivers Disabled			
LVDS "B" Drivers Disabled	0		$65 \pm 5 \text{mA}$

# 5.3 FREE Power Measurement at the Maximum Power Supply Voltage

GARC Mode	GARC_Mode_Wr	+3.6V Current	+3.6V Current
	Data Argument	Measured (mA)	Expected (mA)
LVDS "A" Drivers Enabled			
LVDS "B" Drivers Enabled	768		$215 \pm 5 \text{mA}$
LVDS "A" Drivers Enabled			
LVDS "B" Drivers Disabled	256		$155 \pm 5 \text{mA}$
LVDS "A" Drivers Disabled			
LVDS "B" Drivers Enabled	512		$155 \pm 5 \text{mA}$
LVDS "A" Drivers Disabled			
LVDS "B" Drivers Disabled	0		$95 \pm 5$ mA

# 6.0 GARC Register Read/Write Tests

G
This test may be automated using the LabView GSE via the Register Test VI.
Γest Completed
5.40 Test of the GAFE Parity Command Circuitry
This test may be automated using the LabView GSE via the <b>GAFE Parity Command Test.txt</b> script
Γest Completed
5.41 Test of the GARC Parity Test
This test may be automated using the LabView GSE via the <b>GARC Parity Test.txt</b> script
Test Completed
5.42 Test of the GARC Diagnostic Register
This test may be automated using the LabView GSE via the <b>GARC Diagnostic Status Reg Test.txt</b> script
Test Completed
5.43 Test of the GARC Command Counters
This test may be automated using the LabView GSE via the <b>GARC Command Counter Test.txt</b> script
Test Completed

# 6.44 Test of the Look-At-Me Circuitry

This test may be automated using the LabView GSE via the **GARC Look At Me Test.txt** script.

Test	Completed
7.1	Maximum PHA Return Test
This	test may be automated using the LabView GSE via the <b>GARC Max PHA Return Test.txt</b> script.
Test	Completed
7.2	PHA Enable/Disable Test
This	test may be automated using the LabView GSE via the <b>GARC PHA Enable Test.txt</b> script.
Test	Completed
7.3	PHA Threshold Verification Test
This	test may be automated using the LabView GSE via the <b>GARC Chip PHA Threshold Test.txt</b> script.
Test	Completed
8.1	Capture of the DAC Control Signals
DAC	Control Signals verified
Reco	rd DAC Clock Frequency(5Mhz ±)
Reco	rd Reset Pulse Width(150nSec ±)
8.2	TEST OF THE SAA/HV NORMAL MODES
1.	HVBS Level set to 2048
2	SAA Level set to 1024
3. This	Using a multimeter on the DAC voltage reference, verify that the MAX5121 reference is at 1.25V. is J5-3 on the GARC test board.
Valu	<b>e observed:</b> (1.25V $\pm$ mV)
4. the C	Using a multimeter on the DAC output, verify that the MAX5121 output is at 0V. This is J5-1 on GARC test board.
	Value observed: $(0V \pmm mV)$
5. at J5.	Send the Use_HV_Nominal command. Verify that the MAX5121 output goes to half scale, 0.625V-1
	Value observed: $(0.625V \pm mV)$

6. decim	Send the DAC_HVReg_Rd comnal 10240.	amand and verify the return data pattern from the MAX5121 DAC is
	Verified:	
7. J5-1.		nand. Verify that the MAX5121 output goes to 1/4 scale, 0.312 V at
	Value observed:	$(0.325V \pm \underline{\hspace{1cm}} mV)$
8. is dec	Send the DAC_SAAReg_Rd concimal 9216.	mmand and verify the return data pattern from the MAX5121 DAC
	Verified:	
8.3	Test of the HVBS Triple Modu	ılar Redundancy Circuitry
This t	test may be automated using the La	bView GSE via the <b>GARC HV Enable Test.tst</b> script.
Volta	ge at Pin J7-6 when Enabled	$(3.25V \pm \underline{\hspace{1cm}} mV)$
Volta	ge at Pin J7-7 when Enabled	$(3.25V \pm \underline{\hspace{1cm}} mV)$
Volta	age at Pin J7-6 when Disabled	(0.015V ±mV)
Volta	age at Pin J7-7 when Disabled	(0.015V ±mV)
Test (	Completed	
9.0	GARC Test Pin Mux Verificat	ion
	tor J7-8	
	Completed -	
1000		
10.0	Test of the Hold Delay Operat	ion
Trigg	ger on "TRIG TST" at J7-9 and mor	nitor "Hold" at J4-12.
GAFI	E_HOLD_P Voltage (J4-12)	$(870\text{mV} \pm \text{mV})$
GAFI	E_HOLD_M Voltage (J4-11)	$(1600\text{mV} \pm \text{mV})$
The L	LabView test script GARC Hold I	Delay Test.txt may be used to partially automate this test.
Test (	Completed -	
11.1	Veto Delay Test	
This t	test may be automated using the La	bView GSE via the script <b>GARC_VETO_Delay_Test.txt</b> .
Test (	Completed	

11.2	Veto	Width	<b>Test</b>
------	------	-------	-------------

	tetup for this test is the same as the VET iew GSE via the <b>GARC VETO Widt</b>	O Delay test above. This test may be automated using the <a "b"="" a"="" and="" enable="" href="https://example.com/&lt;/th&gt;&lt;/tr&gt;&lt;tr&gt;&lt;th&gt;Test C&lt;/th&gt;&lt;th&gt;Completed -&lt;/th&gt;&lt;th&gt;_&lt;/th&gt;&lt;/tr&gt;&lt;tr&gt;&lt;th&gt;11.3&lt;/th&gt;&lt;th&gt;Veto Enable and Disable Test&lt;/th&gt;&lt;th&gt;&lt;/th&gt;&lt;/tr&gt;&lt;tr&gt;&lt;th&gt;&lt;/th&gt;&lt;th&gt;test may be automated when using the I txt. Monitor the counters to verify the&lt;/th&gt;&lt;th&gt;LabView GSE via test script GARC VETO Disable A/B Side Veto signals.&lt;/th&gt;&lt;/tr&gt;&lt;tr&gt;&lt;th&gt;1. Sei&lt;/th&gt;&lt;th&gt;end the GARC_Mode_Wr command with&lt;/th&gt;&lt;th&gt;th a value of 768 to enable the " side="" th="" vetos.<=""></a>
	R1(expected	1 400mV ±mV)
	R2(expected	1 400mV ±mV)
2. Sei	end the GARC_Mode_Wr command with	th a value of 512 to disable the "A" and enable "B" side VETOs.
	R1(expected	1 400mV ±mV)
	R2(expected	$150\text{mV} \pm \underline{\qquad} \text{mV}$
3. Sei	end the GARC_Mode_Wr command with	th a value of 256 to enable the "A" and disable "B" side VETOs.
	R1(expected	$150\text{mV} \pm \underline{\qquad} \text{mV}$
	R2(expected	1 400mV ±mV)
4. Sei		th a value of 0 to disable both the "A" and "B" side VETOs.
	R1(expected	
	R2(expected	150mV ±mV)
Side A	A Test Completed	
Side E	B Test Completed	
11.4	Veto Minimum Width Test	
Test C	Completed	-
11.5	Veto Double Pulse Test	
Test C	Completed	-
11.6	Veto Minimum Width Test	
Test C	Completed	_

# 12.1 HitMap Width Test

This test may be automated using the LabView GSE via the <b>GARC HitMap Width Test.txt</b> script.
Test Completed
12.2 HitMap Delay Test
Test Skipped
This test may be automated using the LabView GSE via the <b>GARC HitMap Delay Test.txt</b> script
Test Completed
12.3 HitMap Deadtime Stretch Test
This test may be automated using the LabView GSE via the <b>GARC_HitMap_Deadtime_Test.txt</b> script
Test Completed
12.4 HitMap Minimum Width Test
Test Completed
12.5 HitMap Double Pulse Test  Test Completed
12.6 HitMap Minimum Width Test
Measured Merge Time(Expected Value 1100nSec ±nSec)
Test Completed
13.0 Strobe Test
Measure the DC levels of both STROBE_P and STROBE_M and record the values below
$STROBE\_P (DC) (J4-10) : \underline{\hspace{1cm}} (expected \sim 700 \text{ mV} \pm \underline{\hspace{1cm}} \text{mV})$
STROBE_M (DC) (J4-9) :(expected ~1600 mV ±mV)
STROBEP to STROBEM differential voltage:(expected 900 mV $\pm$ mV)
Live-to-STROBE delay:(expected ~ 150 nSec ±nSec)

STROBE pulse duration (µsec):	(expected 12.5 μSec ±μSec)
14.0 Capture of the ADC Control Signals	
Clock rate measured: (5MHz $\pm$	_MHz)
Duration (expected $\sim 10.6~\mu Sec~\pm$	_μSec)
15.0 ADC TACQ Test	
This test may be automated using the LabView GSE s	script GARC ADC TACQ Test.txt
Test Completed	

# 16.0 Test of the GARC LVDS Circuitry Driver Currents

GARC Signal	Signal Location	DC Level (V) Enabled	DC Level (V) Disabled
ACD NVETO 12B	R1		
ACD NVETO 12A	R2		
ACD NVETO 11B	R3		
ACD_NVETO_11A	R4		
ACD_NVETO_10B	R5		
ACD_NVETO_10A	R6		
ACD_NVETO_09B	R7		
ACD_NVETO_09A	R8		
ACD_NVETO_08B	R9		
ACD_NVETO_08A	R10		
ACD_NVETO_07B	R11		
ACD_NVETO_07A	R12		
ACD_NVETO_06B	R13		
ACD_NVETO_06A	R14		
ACD_NVETO_05B	R15		
ACD_NVETO_05A	R16		
ACD_NVETO_04B	R17		
ACD_NVETO_04A	R18		
ACD_NVETO_03B	R19		
ACD_NVETO_03A	R20		
ACD_NVETO_02B	R21		
ACD_NVETO_02A	R22		
ACD_NVETO_01B	R23		
ACD_NVETO_01A	R24		
ACD_NVETO_00B	R25		
ACD_NVETO_00A	R26		
ACD_CNO_B	R27		
ACD_CNO_A	R28		
ACD_NSDATA_B	R29		
ACD_NSDATA_A	R30		
ACD_RESET_B	R41		

ACD_CMD_B	R42	
ACD_CMD_A	R43	
ACD_CLK_A	R44	
ACD_NVETO_13B	R31	
ACD_NVETO_13A	R32	
ACD_NVETO_14B	R33	
ACD_NVETO_14A	R34	
ACD_NVETO_15B	R35	
ACD_NVETO_15A	R36	
ACD_NVETO_16B	R37	
ACD_NVETO_16A	R38	
ACD_NVETO_17B	R39	
ACD_NVETO_17A	R40	

Measure the GAFE to GARC LVDS signals.

GARC Signal	Test Board Pin	DC Level (V)	Switch Swing (V)
IRTN_00	J4-33		
DISC_00	J4-34		
CHID_00	J4-35		
IRTN 01	J4-36		
DISC_01	J4-37		
CHID 01	J4-38		
IRTN_02	J4-39		
DISC 02	J4-40		
CHID_02	J4-41		
IRTN_03	J4-42		
DISC_03	J4-43		
CHID_03	J4-44		
IRTN_04	J4-45		
DISC 04	J4-46		
CHID 04	J4-47		
IRTN 05	J4-48		
DISC 05	J4-49		
CHID 05	J4-50		
IRTN 06	J4-51		
DISC 06	J4-52		
CHID_06	J4-53		
IRTN_07	J4-54		
DISC 07	J4-55		
CHID 07	J4-56		
IRTN_08	J4-57		
DISC 08	J4-58		
CHID_08	J4-59		
IRTN_09	J4-60		
DISC_09	J4-61		
CHID_09	J4-62		
IRTN_10	J4-63		
DISC_10	J4-64		
CHID_10	J4-65		
IRTN_11	J4-66		

DICC 11	14.67	
DISC_11	J4-67	
CHID_11	J4-68	
IRTN_12	J4-69	
DISC_12	J4-70	
CHID_12	J4-71	
IRTN_13	J4-72	
DISC_13	J4-73	
CHID_13	J4-74	
IRTN_14	J4-75	
DISC_14	J4-76	
CHID_14	J4-77	
IRTN_15	J4-78	
DISC_15	J4-79	
CHID_15	J4-80	
IRTN_16	J4-81	
DISC_16	J4-82	
CHID_16	J4-83	
IRTN_17	J4-84	
DISC_17	J4-85	
CHID_17	J4-86	

# 17.0 Clock Frequency and Power Rail Tests

1) 22MHz Clock operation verified at all rail voltages -	
+3.0V Current	_
+3.6V Current	_
2) 14MHz Clock operation verified at all rail voltages-	

# END OF GARC TEST PROCEDURE